

# Hydraulic Oil/Air/Coolant Rotary Joint

Model JRA/JRB/JRC/JRD




## Long Operational Life • Compact • Low Torque

A center through port is available for high volume coolant.


### Durable

Highly-durable sealing + highly-rigid body to satisfy the specification values even after using for a long time.

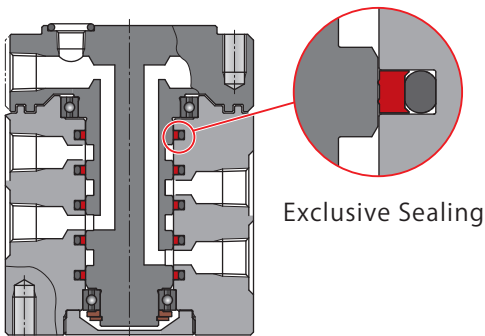


### Compact

The compact design allows for minimal installation space.

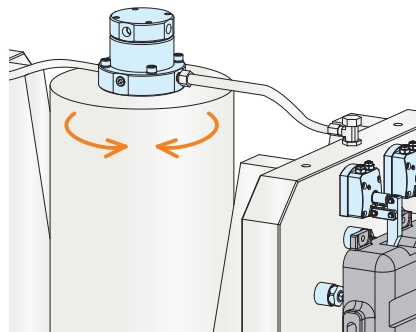

### Smooth

Low torque and smooth rotation reduces loads to the surrounding application. Ensures low torque even under high pressure.

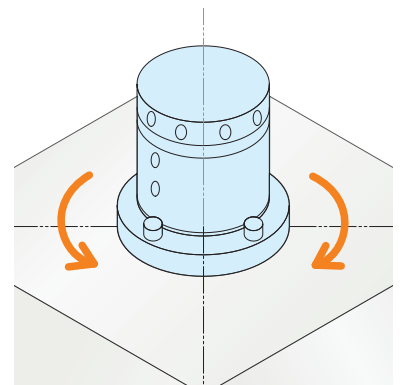

## • For Hydraulic Oil, Air and High Volume Coolant<sup>※1</sup>

Introducing the Kosmek exclusive low-friction sealing, it enables low-torque and smooth rotation. Each part of the Rotary Joint has high rigidity, and the highly-durable sealing and the high-capacity design allows for a longer operational life.

You can choose the number of ports from 2, 4, 6, 8, 12, 16 along with the center through port<sup>※1</sup>.

※1. JRB is the only model with the center through port designed for a large amount of coolant.  
(When using the center through port, install a swivel joint, etc.)

**Cross Section**

# 4 Models Available

Select the best model based on your requirements.

- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit**
- Manual Operation Accessories
- Cautions / Others

Air Sequence Valve

- BWD

Hydraulic Non-Leak Coupler

- BGA/BGB
- BGC/BGD
- BGP/BGS
- BBP/BBS
- BNP/BNS
- BJP/BJS
- BFP/BFS

Auto Coupler

- JTA/JTB
- JTC/JTD
- JVA/JVB
- JVC/JVD
- JVE/JVF
- JNA/JNB
- JNC/JND
- JLP/JLS

Rotary Joint

- JR


Hydraulic Valve

- BK
- BEQ
- BT
- BLS/BLG
- BLB
- JSS/JS
- JKA/JKB
- BMA/BMG
- AU/AU-M
- BU
- BP/JPB
- BX
- BEP/BSP
- BH
- BC


Air Hydraulic Unit

- CV
- CK
- CP/CPB
- CPC/CQC
- CB
- CC
- AB/AB-V
- AC/AC-V

**NEW** Model JRA

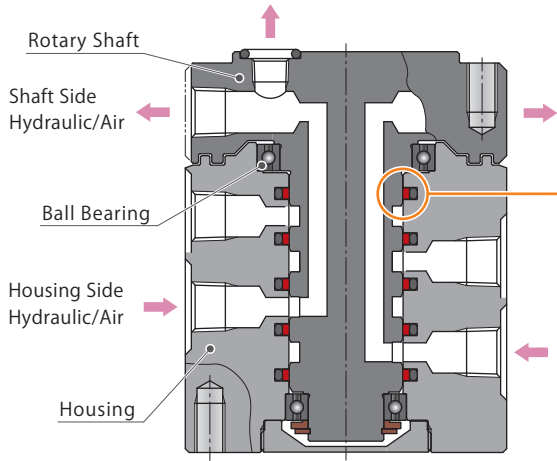


Model JRC

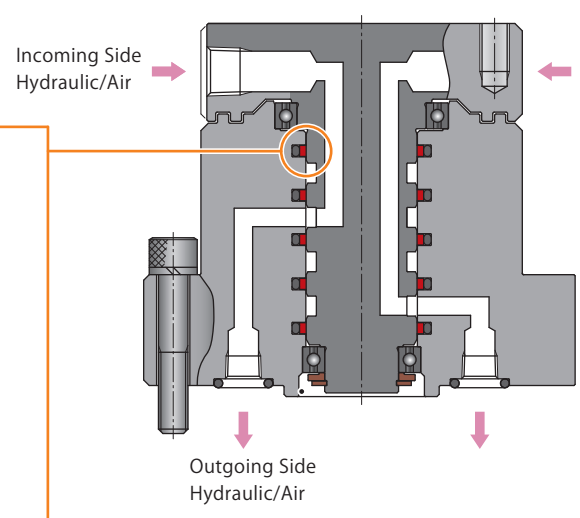

**Sealing Part Detail**


Model JRD

The dual structure allows for taller and more compact body.

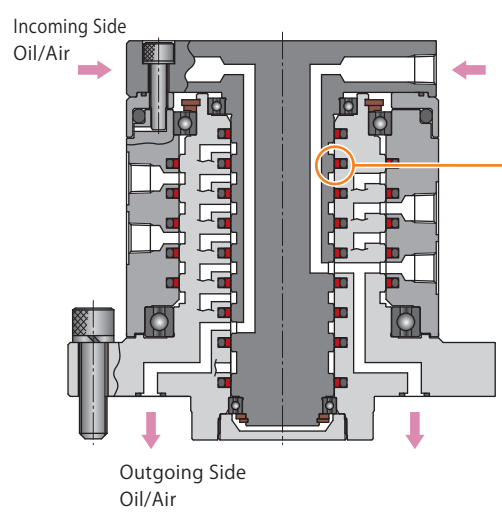


Model JRB


The center through port allows for high volume coolant.

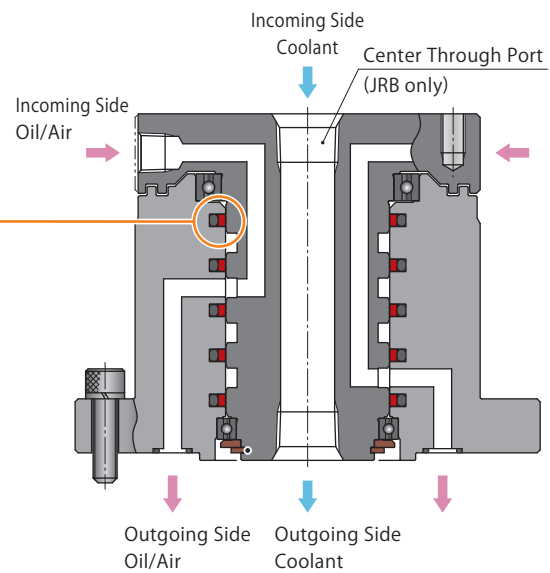


Application Examples

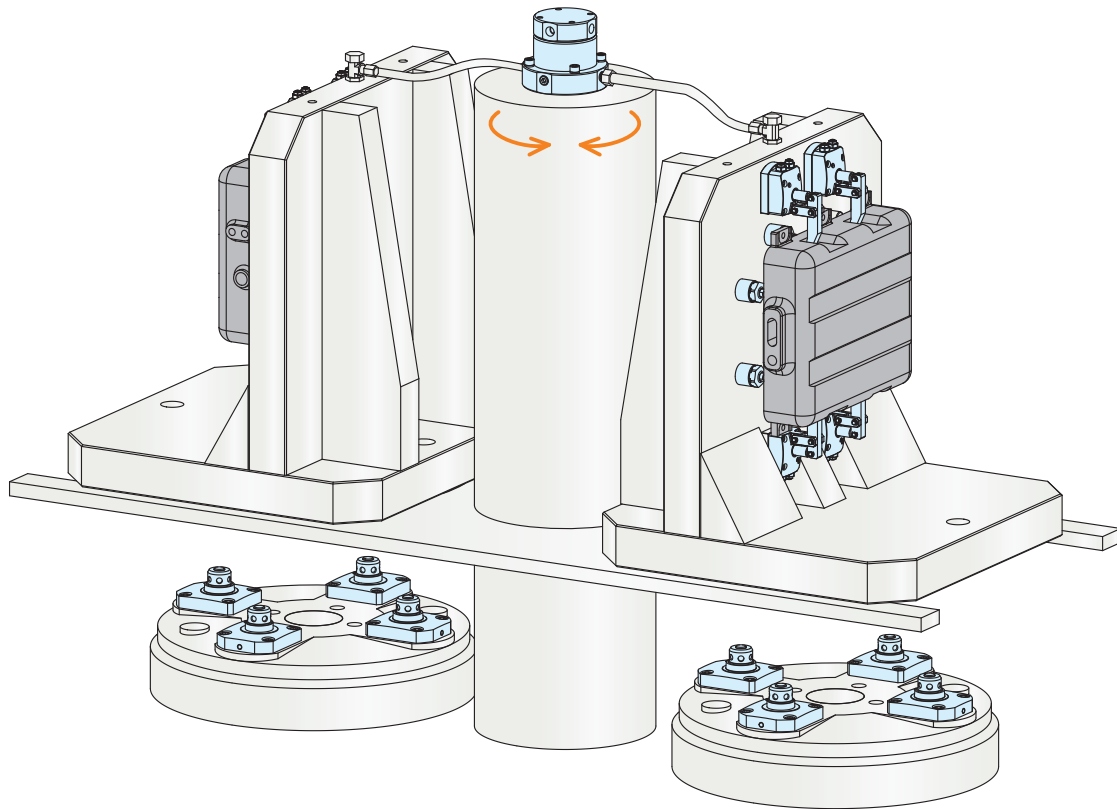

Turntable

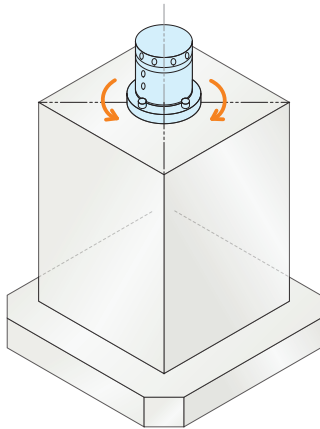


Angle Plate Fixture

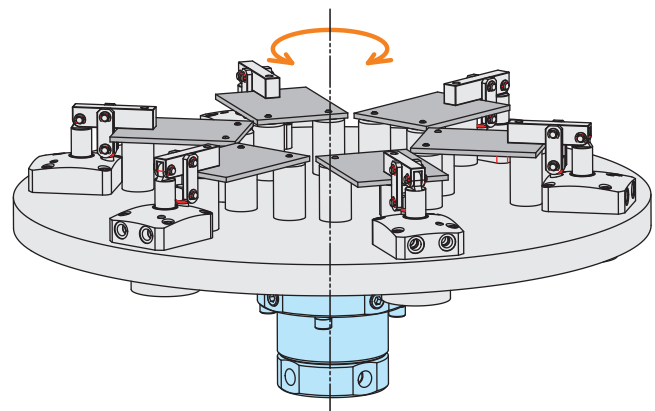


Fixture


Exclusive Cases ※ Some of exclusive cases. Please contact us for custom-made Rotary Joint.

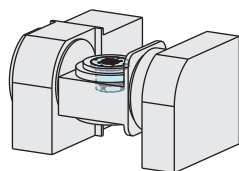

NC Rotary Table

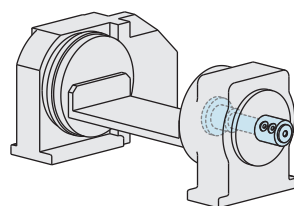


Tail Stock

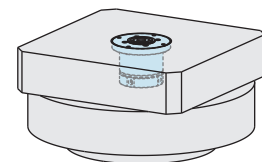





B-axis of Machine Table

- Higher outgoing side pressure with low torque

Using a booster (model AU/BU) after rotary joint allows low rotating torque and the use of high pressure for actuators.

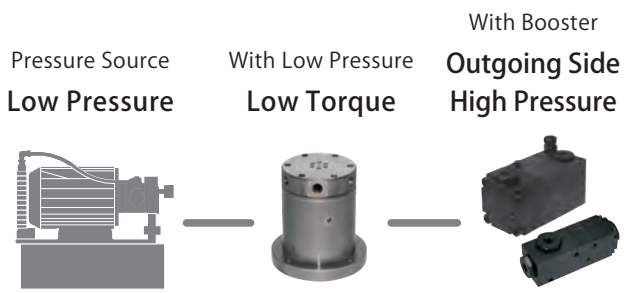


### Rotary Joint Models

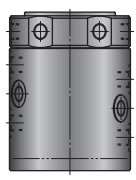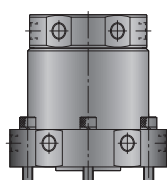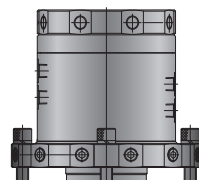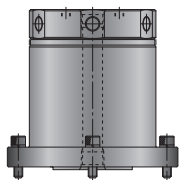	<b>NEW</b>  Model <b>JRA</b> → P.1177	 Model <b>JRC</b> → P.1178	 Model <b>JRD</b> → P.1179	 Model <b>JRB</b> → P.1180
Center Through Port	No Center Through Port			One Center Through Port
The Number of Ports	2/4/6/8		12/16	2/4/6/8 + Center Through Port
Features	Low Rotary Torque • Compact		Dual Structure • Compact	Large Flow Rate
Flange	No Flange	With Flange		
Usable Fluid	General Hydraulic Oil : 25MPa or less			
	Air : 1MPa or less			
				Coolant : 1MPa or less (Available only for Center Through Port)

- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit
- Manual Operation Accessories
- Cautions / Others
  
- Air Sequence Valve
  - BWD
- Hydraulic Non-Leak Coupler
  - BGA/BGB
  - BGC/BGD
  - BGP/BGS
  - BBP/BBS
  - BNP/BNS
  - BJP/BJS
  - BFP/BFS
- Auto Coupler
  - JTA/JTB
  - JTC/JTD
  - JVA/JVB
  - JVC/JVD
  - JVE/JVF
  - JNA/JNB
  - JNC/JND
  - JLP/JLS
- Rotary Joint
  - JR
- Hydraulic Valve
  - BK
  - BEQ
  - BT
  - BLS/BLG
  - BLB
  - JSS/JS
  - JKA/JKB
  - BMA/BMG
  - AU/AU-M
  - BU
  - BP/JPB
  - BX
  - BEP/BSP
  - BH
  - BC
- Air Hydraulic Unit
  - CV
  - CK
  - CP/CPB
  - CPC/CQC
  - CB
  - CC
  - AB/AB-V
  - AC/AC-V

Model No. Indication : No Center Through Port Model

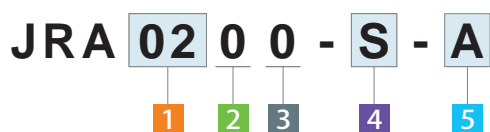

1 The Number of Ports

- 02 : 2 ports      06 : 6 ports
- 04 : 4 ports      08 : 8 ports

2 Center Through Port

- 0 : None

3 Design No.

- 0 : Revision Number

4 Housing Side Piping Method

- S : Piping Option (Rc Thread)
- B : Piping Option (G Thread)<sup>※1</sup>

5 Shaft Side Piping Method

- A : Both Gasket and Piping Option (With R Thread Plug)
- D : Both Gasket and Piping Option (With G Thread Plug)<sup>※1</sup>

Notes :

1. Contact us for other piping methods.
- ※1. Contact us when a G screw is required for the housing side port or the shaft side port.

Specifications

Model No.		JRA0200-□-□	JRA0400-□-□	JRA0600-□-□	JRA0800-□-□
Operating Pressure MPa	Oil	0 ~ 25.0			
	Air	0 ~ 1.0			
Port	The Number of Ports	2	4	6	8
	Min. Passage Area mm <sup>2</sup>	19.6			
Center Through Port		None			
Usable Fluid		General Hydraulic Oil or Air			
Operating Temperature °C		-10 ~ 70			
Weight	kg	2.4	4.5	7.8	9.3


- Notes :
1. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  2. Please avoid continuous operation as it will cause overheating and damage to the internal packing.

Performance Curve : Allowable Rotation Speed Graph

Model No.	Allowable Rotation Speed (min <sup>-1</sup> )			
	JRA0200	JRA0400	JRA0600	JRA0800
Fluid Pressure (MPa)	-□-□	-□-□	-□-□	-□-□
25	80		60	
14		160		125
7			280	200
2.5		390		280

Notes :

1. This graph shows the relationship between Allowable Rotation Speed (min<sup>-1</sup>) and Fluid Pressure (MPa).
2. Do not exceed the temperature written in the specification even with lower rotation speed.

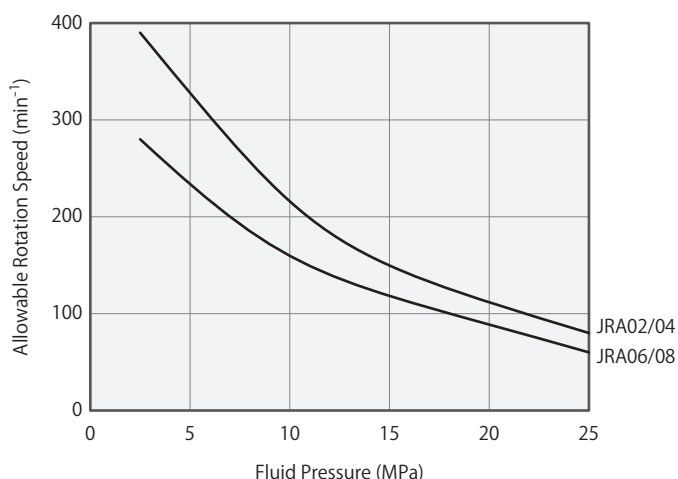

## Model No. Indication : No Center Through Port Model



### 1 The Number of Ports

**02** : 2 ports      **06** : 6 ports  
**04** : 4 ports      **08** : 8 ports

### 2 Center Through Port

**0** : None

### 3 Design No.

**0** : Revision Number

### 4 Incoming Side Piping Method

**S** : Piping Option (Rc Thread)  
**B** : Piping Option (G Thread)\*2

### 5 Outgoing Side Piping Method

**A** : Both Gasket and Piping Option  
 (With R Thread Plug)  
**D** : Both Gasket and Piping Option  
 (With G Thread Plug)\*2

Note :

- Contact us for other piping methods.
- Contact us when a G screw is required for the incoming side port or the outgoing side port.

## Specifications

Model No.	JRC0200-□-□	JRC0400-□-□	JRC0600-□-□	JRC0800-□-□	
Operating Pressure MPa	Oil 0 ~ 25.0 Air 0 ~ 1.0				
Port	The Number of Ports	2	4	6	8
	Min. Passage Area mm <sup>2</sup>	19.6			
Center Through Port	None				
Usable Fluid	General Hydraulic Oil or Air				
Operating Temperature °C	-10 ~ 70				
Weight kg	4.5	5.5	8.0	9.5	


- Notes :
- If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation as it will cause overheating and damage to the internal packing.

## Performance Curve : Allowable Rotation Speed Graph

Model No.	Allowable Rotation Speed (min <sup>-1</sup> )			
	JRC0200	JRC0400	JRC0600	JRC0800
Fluid Pressure (MPa)	-□-□	-□-□	-□-□	-□-□
25	80	60		
14	160	125		
7	280	200		
2.5	390	280		

Notes :

- This graph shows the relationship between Allowable Rotation Speed (min<sup>-1</sup>) and Fluid Pressure (MPa).
- Do not exceed the temperature written in the specification even with lower rotation speed.

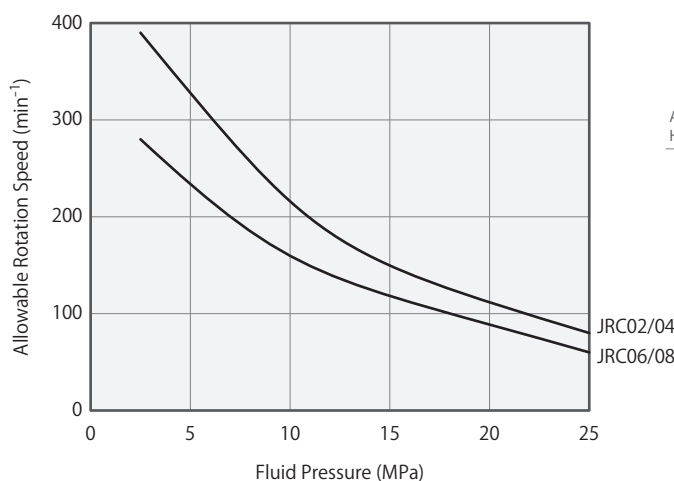

- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit
- Manual Operation Accessories
- Cautions / Others

- Air Sequence Valve
- BWD

- Hydraulic Non-Leak Coupler
- BGA/BGB
- BGC/BGD
- BGP/BGS
- BBP/BBS
- BNP/BNS
- BJP/BJS
- BFP/BFS


- Auto Coupler
- JTA/JTB
- JTC/JTD
- JVA/JVB
- JVC/JVD
- JVE/JVF
- JNA/JNB
- JNC/JND
- JLP/JLS

- Rotary Joint
- JR

- Hydraulic Valve
- BK
- BEQ
- BT
- BLS/BLG
- BLB
- JSS/JS
- JKA/JKB
- BMA/BMG
- AU/AU-M
- BU
- BP/JPB
- BX
- BEP/BSP
- BH
- BC

- Air Hydraulic Unit
- CV
- CK
- CP/CPB
- CPC/CQC
- CB
- CC
- AB/AB-V
- AC/AC-V

Model No. Indication : No Center Through Port Model

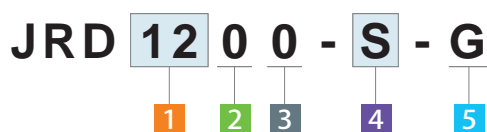

**1** The Number of Ports

- 12 : 12 ports
- 16 : 16 ports

**2** Center Through Port

- 0 : None

**3** Design No.

- 0 : Revision Number

**4** Incoming Side Piping Method

- S : Piping Option (Rc Thread)
- B : Piping Option (G Thread)<sup>※1</sup>

**5** Outgoing Side Piping Method

- G : Gasket Option

Notes :

- 1. Contact us for other piping methods.
- ※1. Contact us when a G screw is required for the incoming side port or the outgoing side port.

Specifications

Model No.		JRD1200-□-G	JRD1600-□-G
Operating Pressure MPa	Oil	0 ~ 25.0	
	Air	0 ~ 1.0	
Port	The Number of Ports	12	16
	Min. Passage Area mm <sup>2</sup>	9.1	
Center Through Port		None	
Usable Fluid		General Hydraulic Oil or Air	
Operating Temperature	°C	-10 ~ 70	
Weight	kg	20	25


- Notes :
- 1. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - 2. Please avoid continuous operation as it will cause overheating and damage to the internal packing.

Performance Curve : Allowable Rotation Speed Graph


Model No.	Allowable Rotation Speed (min <sup>-1</sup> )	
	JRD1200 -□-G	JRD1600 -□-G
Fluid Pressure (MPa)		
25	25	20
14	55	48
7	90	80
2.5	135	120

Notes :

- 1. This graph shows the relationship between Allowable Rotation Speed (min<sup>-1</sup>) and Fluid Pressure (MPa).
- 2. Do not exceed the temperature written in the specification even with lower rotation speed.

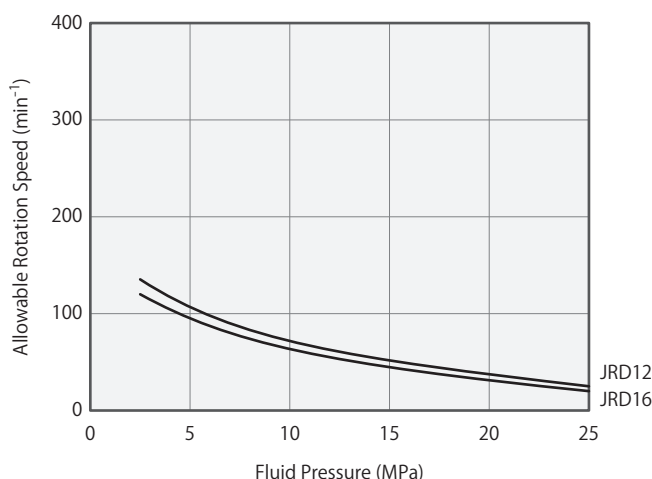

## Model No. Indication : One Center Through Port Model

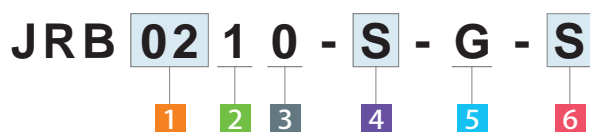

### 1 The Number of Ports

02 : 2 ports      06 : 6 ports  
04 : 4 ports      08 : 8 ports

### 2 Center Through Port

1 : One Center Through Port

### 3 Design No.

0 : Revision Number

### 4 Incoming Side Piping Method

S : Piping Option (Rc Thread)  
B : Piping Option (G Thread)<sup>※2</sup>

### 5 Outgoing Side Piping Method

G : Gasket Option

### 6 Center Through Port Piping Method

S : Piping Option (Rc Thread)  
B : Piping Option (G Thread)<sup>※3</sup>

Notes :

- Contact us for other piping methods.
- ※2. Contact us when a G screw is required for the incoming side port.
- ※3. Only available with conversion connector. Contact us for further information.

## Specifications

Model No.	JRB0210-□-G-□	JRB0410-□-G-□	JRB0610-□-G-□	JRB0810-□-G-□	
Operating Pressure MPa	Oil 0 ~ 25.0 Air·Coolant 0 ~ 1.0				
Port	The Number of Ports	2	4	6	8
	Min. Passage Area mm <sup>2</sup>	28.3			
	Usable Fluid	General Hydraulic Oil or Air			
Center Through Port	The Number of Ports	1			
	Min. Passage Area mm <sup>2</sup>	254			
	Usable Fluid	Coolant (General Hydraulic Oil or Air)			
Operating Temperature °C	-10 ~ 70				
Weight kg	7.5	10.0	12.5	15.0	


- Notes :
- If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation as it will cause overheating and damage to the internal packing.

## Performance Curve : Allowable Rotation Speed Graph

Model No.	Allowable Rotation Speed (min <sup>-1</sup> )			
	JRB0210-□-G-□	JRB0410-□-G-□	JRB0610-□-G-□	JRB0810-□-G-□
Fluid Pressure (MPa)	25	14	7	2.5
	40	90	140	200

Notes :

- This graph shows the relationship between Allowable Rotation Speed (min<sup>-1</sup>) and Fluid Pressure (MPa).
- Do not exceed the temperature written in the specification even with lower rotation speed.

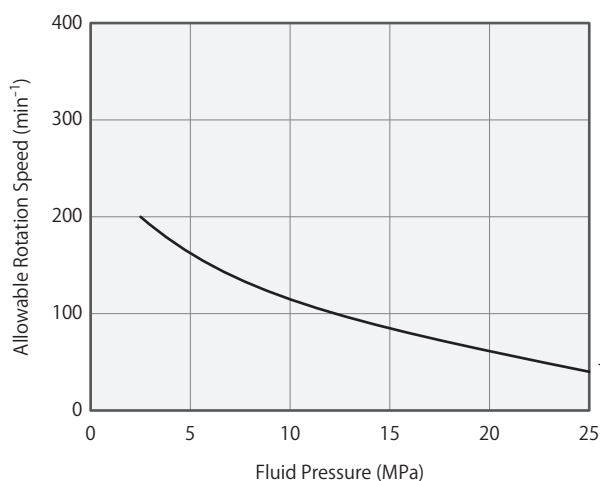

- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit
- Manual Operation Accessories
- Cautions / Others

Air Sequence Valve  
BWD

Hydraulic Non-Leak Coupler  
BGA/BGB  
BGC/BGD  
BGP/BGS  
BBP/BBS  
BNP/BNS  
BJP/BJS  
BFP/BFS

Auto Coupler

JTA/JTB  
JTC/JTD  
JVA/JVB  
JVC/JVD  
JVE/JVF  
JNA/JNB  
JNC/JND  
JLP/JLS

Rotary Joint

JR

Hydraulic Valve

BK  
BEQ  
BT  
BLS/BLG  
BLB  
JSS/JS  
JKA/JKB  
BMA/BMG  
AU/AU-M  
BU  
BP/JPB  
BX  
BEP/BSP  
BH  
BC

Air Hydraulic Unit

CV  
CK  
CP/CPB  
CPC/CQC  
CB  
CC  
AB/AB-V  
AC/AC-V

JRB 02/04/  
06/08




● Performance Curve (Rotary Torque : Reference Value)

● JRA : No Center Through Port Model

Model No.	Rotary Torque (N·m)			
	JRA0200	JRA0400	JRA0600	JRA0800
Fluid Pressure (MPa)	-□-□	-□-□	-□-□	-□-□
25	3.6	5.2	10.8	14.4
20	2.9	4.2	9.1	12.1
15	2.3	3.4	7.5	9.8
10	1.8	2.6	5.9	7.7
7	1.6	2.2	5.0	6.4
0	1.0	1.4	3.0	3.6

Notes :

1. This graph shows the relationship between Rotary Torque (N·m) and Fluid Pressure (MPa).
2. The starting torque might be more than double of rotating torque shown in the graph and may change depending on the conditions of down time, etc.
3. The rotary torque is a reference value.

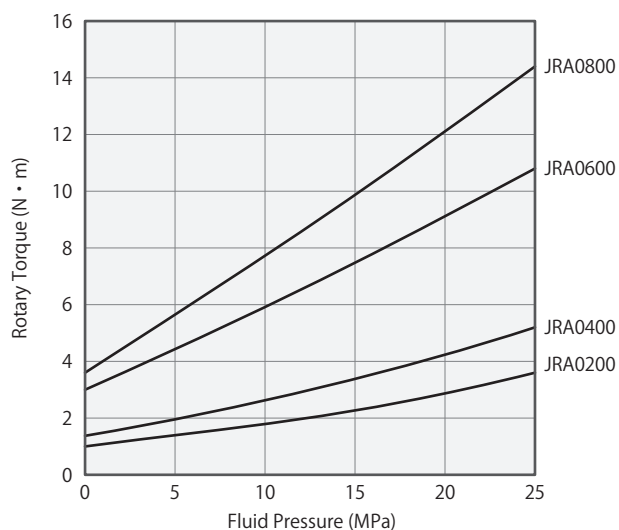


● JRC : No Center Through Port Model

Model No.	Rotary Torque (N·m)			
	JRC0200	JRC0400	JRC0600	JRC0800
Fluid Pressure (MPa)	-□-□	-□-□	-□-□	-□-□
25	3.6	5.2	10.8	14.4
20	2.9	4.2	9.1	12.1
15	2.3	3.4	7.5	9.8
10	1.8	2.6	5.9	7.7
7	1.6	2.2	5.0	6.4
0	1.0	1.4	3.0	3.6

Notes :

1. This graph shows the relationship between Rotary Torque (N·m) and Fluid Pressure (MPa).
2. The starting torque might be more than double of rotating torque shown in the graph and may change depending on the conditions of down time, etc.
3. The rotary torque is a reference value.

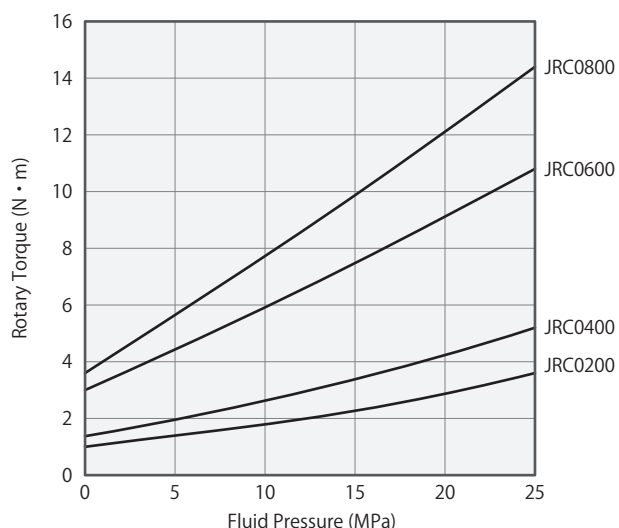


● JRD : No Center Through Port Model

Model No.	Rotary Torque (N·m)	
	JRD1200	JRD1600
Fluid Pressure (MPa)	-□-□- <b>G</b>	-□-□- <b>G</b>
25	100.0	145.0
20	75.0	114.0
15	56.0	89.0
10	42.5	70.0
7	35.0	59.0
0	20.0	40.0

Notes :

1. This graph shows the relationship between Rotary Torque (N·m) and Fluid Pressure (MPa).
2. The starting torque might be more than double of rotating torque shown in the graph and may change depending on the conditions of down time, etc.
3. The rotary torque is a reference value.

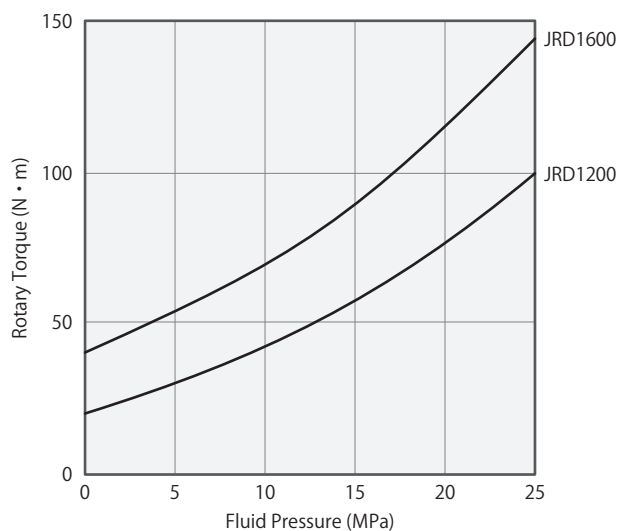


## Performance Curve (Rotary Torque : Reference Value)

### JRB : One Center Through Port Model

Model No.	Rotary Torque (N·m)			
	JRB0210	JRB0410	JRB0610	JRB0810
Fluid Pressure (MPa)	-□-G-□	-□-G-□	-□-G-□	-□-G-□
25	9.6	14.6	20.0	26.0
20	7.6	12.0	16.2	21.0
15	5.7	9.3	13.0	16.5
10	4.2	6.8	10.0	12.7
7	3.5	5.7	8.5	10.5
0	2.3	3.8	5.3	6.8

Notes :

1. This graph shows the relationship between Rotary Torque (N·m) and Fluid Pressure (MPa).
2. The starting torque might be more than double of rotating torque shown in the graph and may change depending on the conditions of down time, etc.
3. The rotary torque is a reference value.

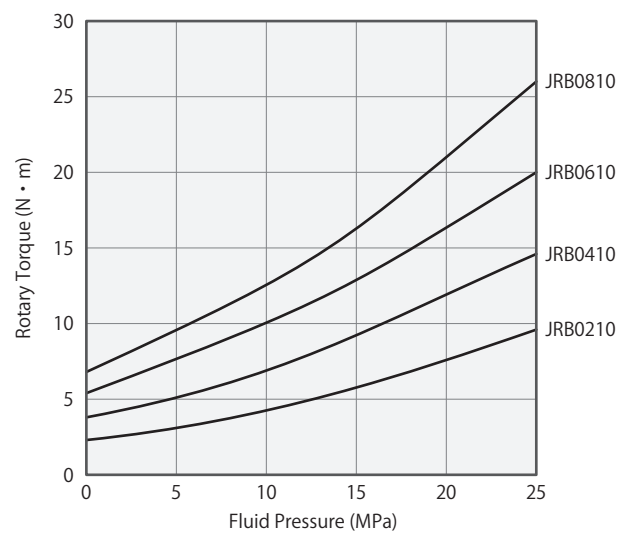



- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit**
- Manual Operation Accessories
- Cautions / Others
- Air Sequence Valve
  - BWD
- Hydraulic Non-Leak Coupler
  - BGA/BGB
  - BGC/BGD
  - BGP/BGS
  - BBP/BBS
  - BNP/BNS
  - BJP/BJS
  - BFP/BFS
- Auto Coupler
  - JTA/JTB
  - JTC/JTD
  - JVA/JVB
  - JVC/JVD
  - JVE/JVF
  - JNA/JNB
  - JNC/JND
  - JLP/JLS
- Rotary Joint**
  - JR
- Hydraulic Valve
  - BK
  - BEQ
  - BT
  - BLS/BLG
  - BLB
  - JSS/JS
  - JKA/JKB
  - BMA/BMG
  - AU/AU-M
  - BU
  - BP/JPB
  - BX
  - BEP/BSP
  - BH
  - BC
- Air Hydraulic Unit
  - CV
  - CK
  - CP/CPB
  - CPC/CQC
  - CB
  - CC
  - AB/AB-V
  - AC/AC-V

External Dimensions : JRA0200

※ This drawing shows JRA0200-S-A.  
(2 Circuit Ports)

Contact us when a G screw is required for the shaft side port or the housing side port.


Model No. Indication

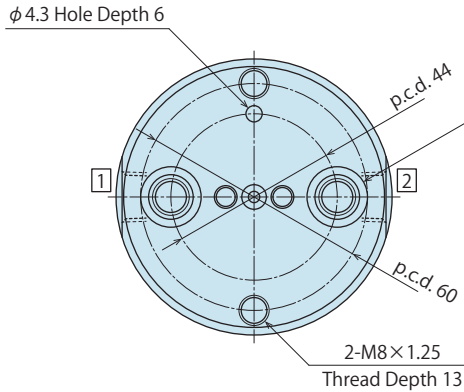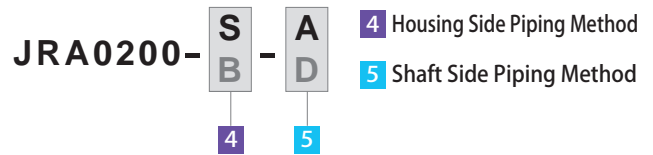




Shaft Side Port : In case of the Gasket Option  
 2-Gasket Port Rc1/8 Thread · 180° Pitch R Thread Plug (Included)  
 O-ring : 1BP12 (Included)

- Notes :
- When mounting the product, restrain only the rotation direction of either of the shaft side or the housing side.
  - Please use a hose for piping of the side which only the rotation direction is restrained.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.
  - When using Rc1/4 for the shaft side port, please set the attached R1/8 thread plug.  
 When using the gasket option, please set the attached O-ring and R1/4 thread plug.

※1. In case of G thread piping option : External dimensions are different. (JRA0200 : 2 port model only)

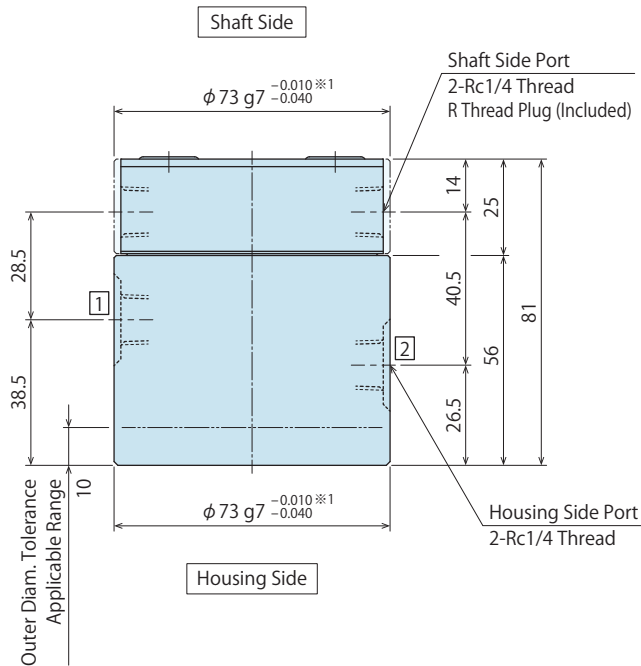

Machining Dimensions of Mounting Area : Shaft Side

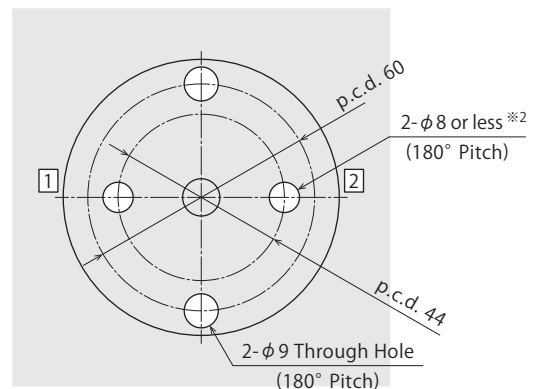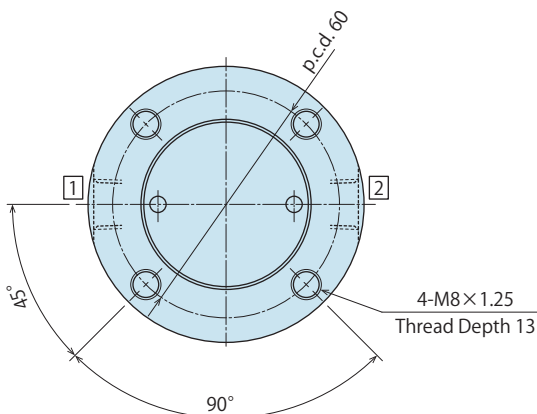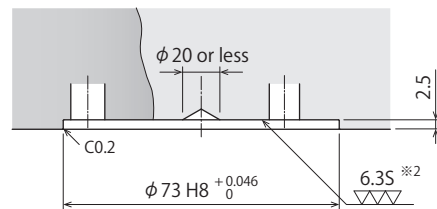

- Notes :
- In case of the gasket option.
  - Refer to the external dimensions for the machining dimensions of the housing side mounting area.
  - The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.


### External Dimensions : JRA0400

※ This drawing shows JRA0400-S-A.  
(4 Circuit Ports)

Contact us when a G screw is required for the shaft side port or the housing side port.

Model No. Indication

**JRA0400** - **S** - **A** **4** Housing Side Piping Method  
**B** - **D** **5** Shaft Side Piping Method

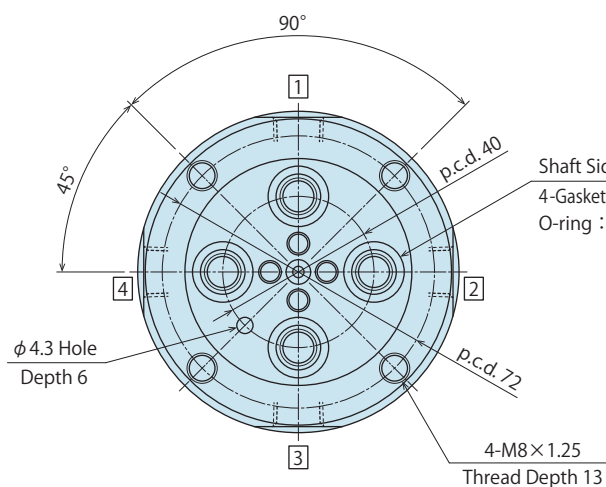

Shaft Side Port : In case of the Gasket Option  
 4-Gasket Port Rc1/8 Thread · 90° Pitch R Thread Plug (Included)  
 O-ring : 1BP12 (Included)

- Notes :
- When mounting the product, restrain only the rotation direction of either of the shaft side or the housing side.
  - Please use a hose for piping of the side which only the rotation direction is restrained.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.
  - When using Rc1/4 for the shaft side port, please set the attached R1/8 thread plug.  
When using the gasket option, please set the attached O-ring and R1/4 thread plug.
  - When mounting the shaft side, gradually tighten the four bolts in diagonal pattern. (In case of the gasket option)

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others


Air Sequence Valve
BWD
Hydraulic Non-Leak Coupler
BGA/BGB
BGC/BGD
BGP/BGS
BBP/BBS
BNP/BNS
BJP/BJS
BFP/BFS

Auto Coupler
JTA/JTB
JTC/JTD
JVA/JVB
JVC/JVD
JVE/JVF
JNA/JNB
JNC/JND
JLP/JLS



Rotary Joint
JR

Hydraulic Valve
BK
BEQ
BT
BLS/BLG
BLB
JSS/JS
JKA/JKB
BMA/BMG
AU/AU-M
BU
BP/JPB
BX
BEP/BSP
BH
BC

Air Hydraulic Unit
CV
CK
CP/CPB
CPC/CQC
CB
CC
AB/AB-V
AC/AC-V

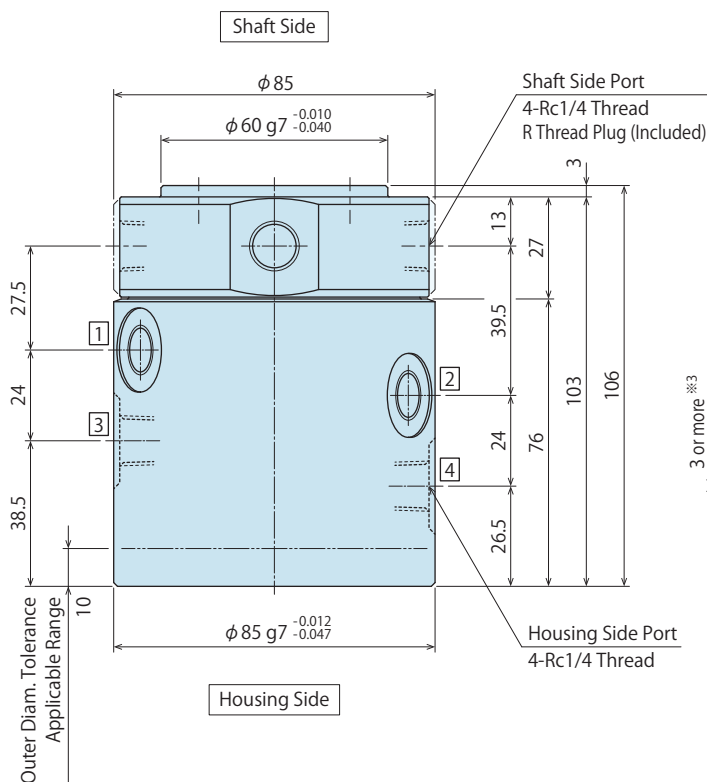

### Machining Dimensions of Mounting Area : Shaft Side

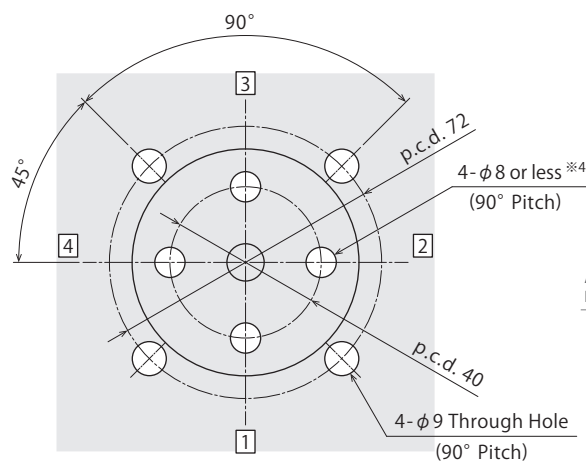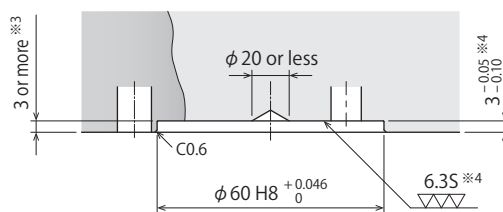



- Notes :
- ※3. In case of the piping option.
  - ※4. In case of the gasket option.
- Refer to the external dimensions for the machining dimensions of the housing side mounting area.
  - The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.3S or less.

External Dimensions : JRA0600



※ This drawing shows JRA0600-S-A.  
(6 Circuit Ports)

Contact us when a G screw is required for the shaft side port or the housing side port.



Model No. Indication

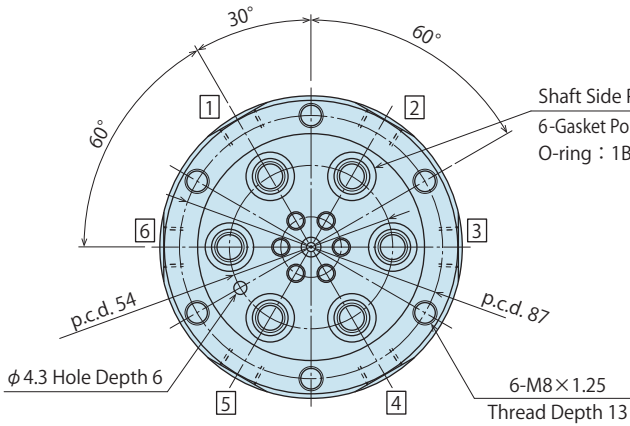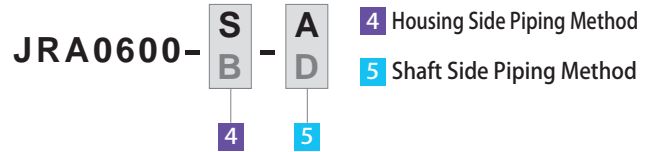

- Notes :
- When mounting the product, restrain only the rotation direction of either of the shaft side or the housing side.
  - Please use a hose for piping of the side which only the rotation direction is restrained.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.
  - When using Rc1/4 for the shaft side port, please set the attached R1/8 thread plug.  
When using the gasket option, please set the attached O-ring and R1/4 thread plug.
  - When mounting the shaft side, gradually tighten the six bolts in diagonal pattern. (In case of the gasket option)

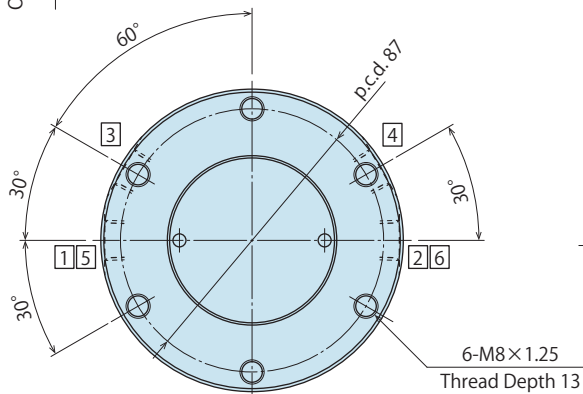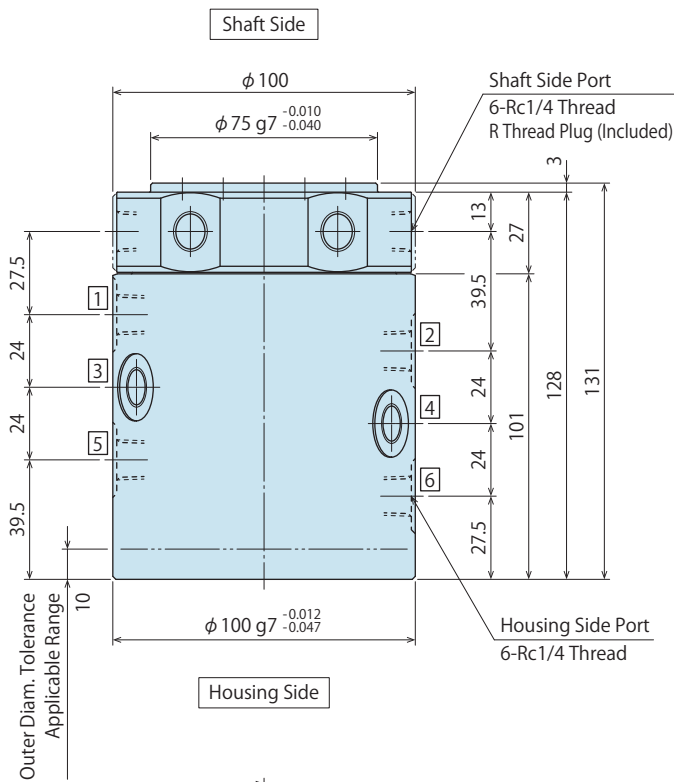

Machining Dimensions of Mounting Area : Shaft Side

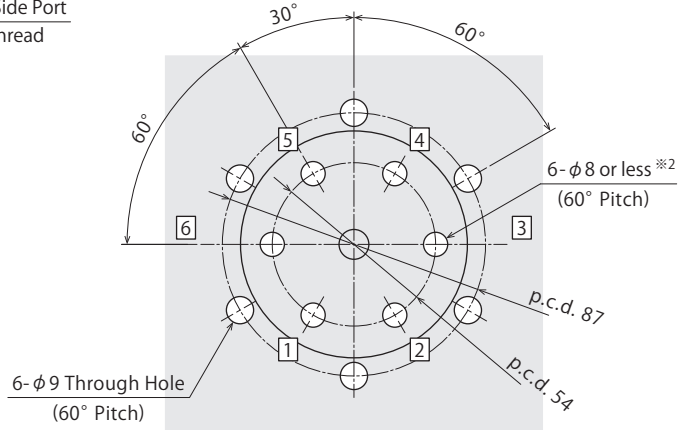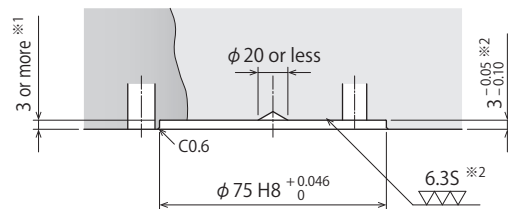

- Notes :
- ※1. In case of the piping option.
  - ※2. In case of the gasket option.
    - Refer to the external dimensions for the machining dimensions of the housing side mounting area.
    - The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.3S or less.


## External Dimensions : JRA0800

※ This drawing shows JRA0800-S-A.  
(8 Circuit Ports)


Contact us when a G screw is required for the shaft side port or the housing side port.

Model No. Indication


**JRA0800-** S - A 4 Housing Side Piping Method  
B - D 5 Shaft Side Piping Method

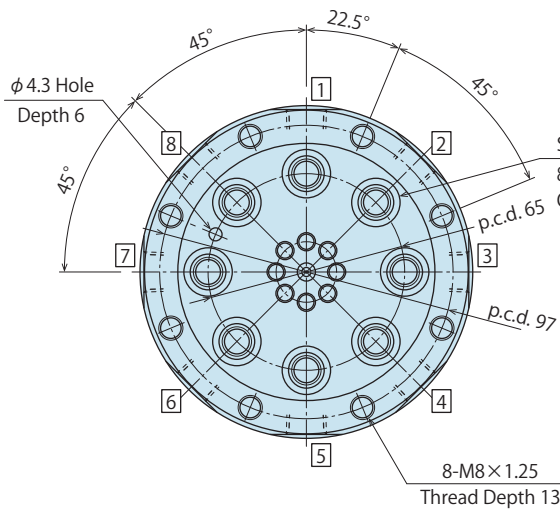

Shaft Side

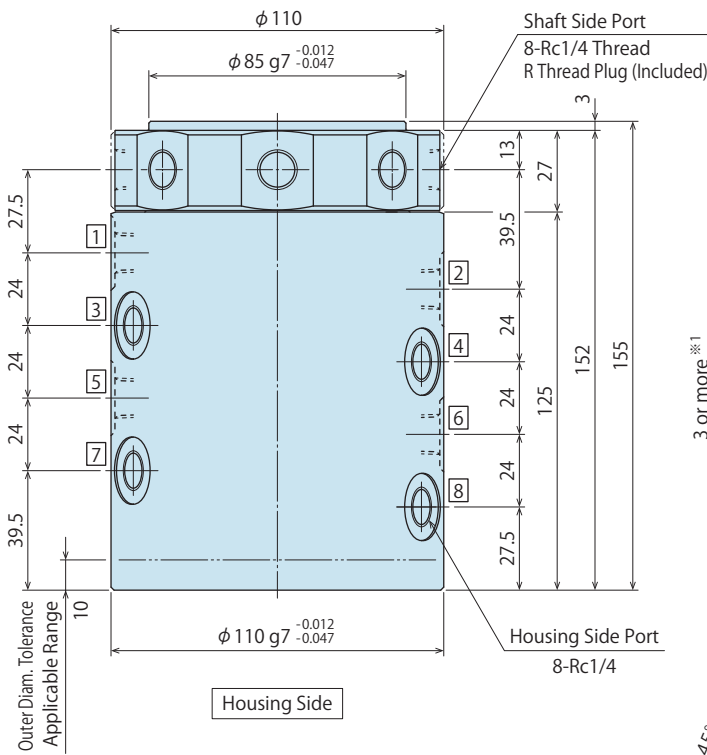



Housing Side

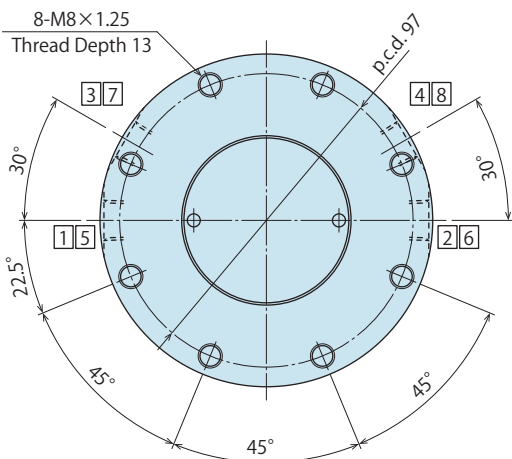

Shaft Side Port : In case of the Gasket Option  
 8-Gasket Port Rc1/8 Thread • 45° Pitch R Thread Plug (Included)  
 O-ring : 1BP12 (Included)

- Notes :
- When mounting the product, restrain only the rotation direction of either of the shaft side or the housing side.
  - Please use a hose for piping of the side which only the rotation direction is restrained.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.
  - When using Rc1/4 for the shaft side port, please set the attached R1/8 thread plug.
  - When using the gasket option, please set the attached O-ring and R1/4 thread plug.
  - When mounting the shaft side, gradually tighten the eight bolts in diagonal pattern. (In case of the gasket option)

## Machining Dimensions of Mounting Area : Shaft Side

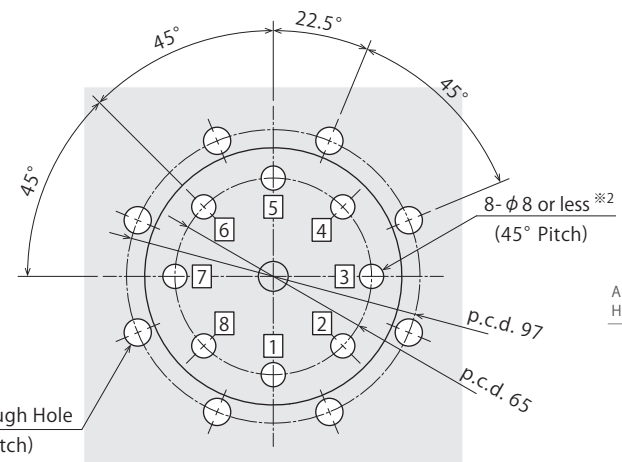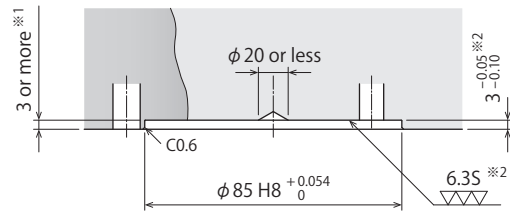

- Notes :
- In case of the piping option.
  - In case of the gasket option.
    - Refer to the external dimensions for the machining dimensions of the housing side mounting area.
    - The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve
BWD

Hydraulic Non-Leak Coupler
BGA/BGB
BGC/BGD
BGP/BGS
BBP/BBS
BNP/BNS
BJP/BJS
BFP/BFS

Auto Coupler
JTA/JTB
JTC/JTD
JVA/JVB
JVC/JVD
JVE/JVF
JNA/JNB
JNC/JND
JLP/JLS

Rotary Joint
JR

Hydraulic Valve
BK
BEQ
BT
BLS/BLG
BLB
JSS/JS
JKA/JKB
BMA/BMG
AU/AU-M
BU
BP/JPB
BX
BEP/BSP
BH
BC



Air Hydraulic Unit
CV
CK
CP/CPB
CPC/CQC
CB
CC
AB/AB-V
AC/AC-V

External Dimensions : JRC0200


※ This drawing shows JRC0200-S-A.  
(2 Circuit Ports)

Contact us when a G screw is required for the incoming side port or the outgoing side port.


Model No. Indication

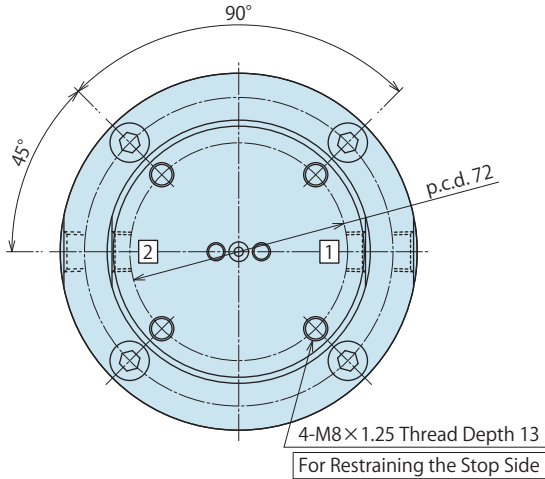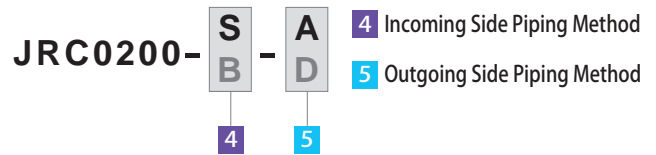

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  5. The port number is marked on each port.
  6. When using Rc1/4 for the outgoing side port, please set the attached R1/8 thread plug.
- When using the gasket option, please set the attached O-ring and R1/4 thread plug.

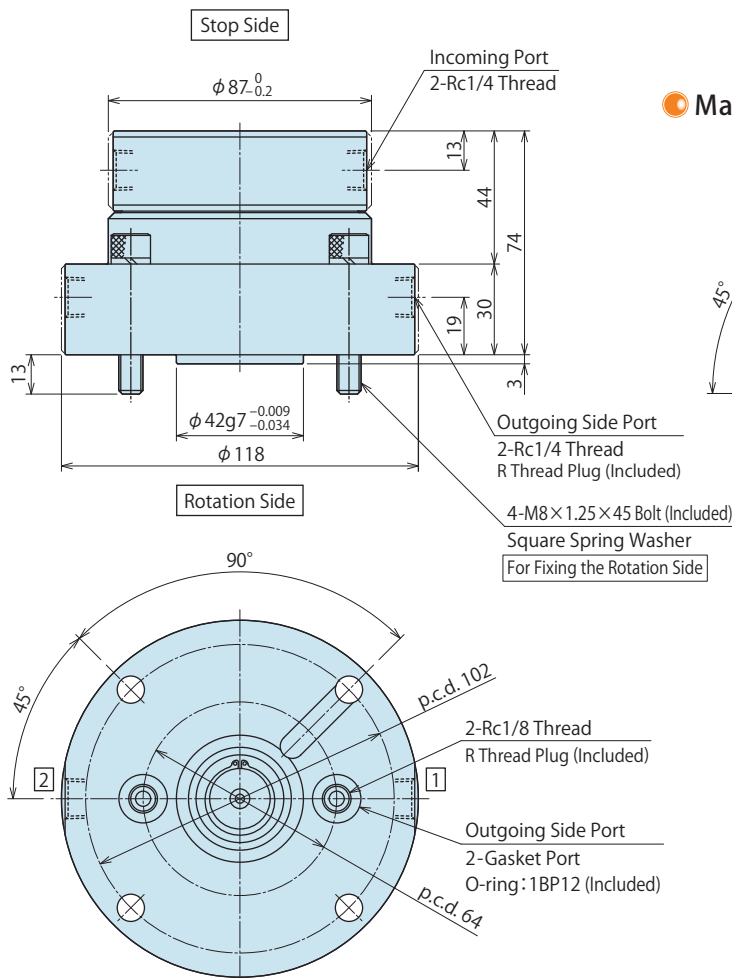

Machining Dimensions of Mounting Area

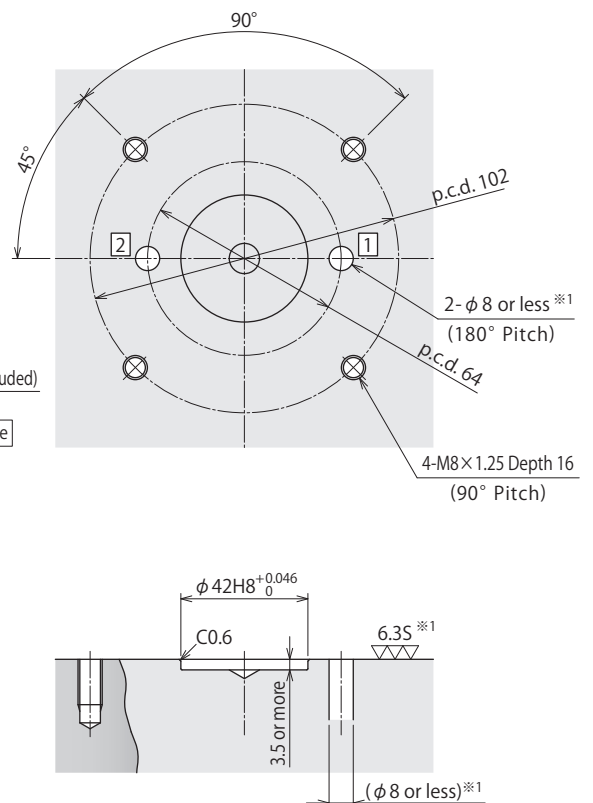



- Notes :
- ※1. In case of the gasket option.
1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.3S or less.

### External Dimensions : JRC0400


※ This drawing shows JRC0400-S-A.  
(4 Circuit Ports)

Contact us when a G screw is required for the incoming side port or the outgoing side port.



Model No. Indication

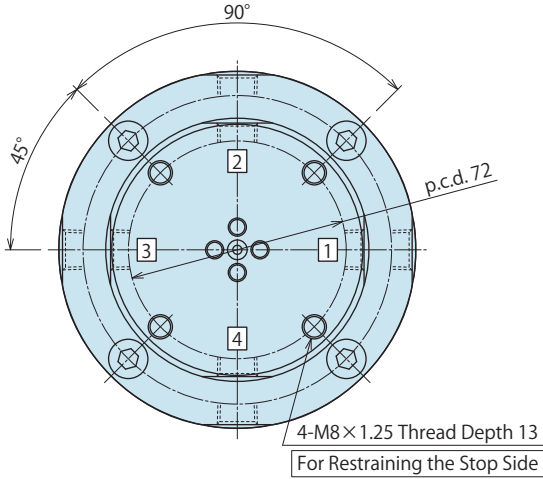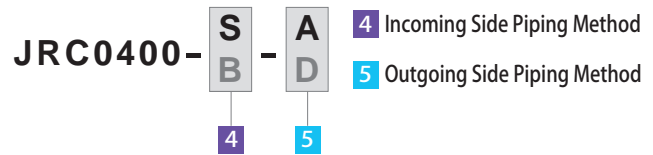

- Notes :
- The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  - Please use a hose for piping of the stop side.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.
  - When using Rc1/4 for the outgoing side port, please set the attached R1/8 thread plug.
- When using the gasket option, please set the attached O-ring and R1/4 thread plug.

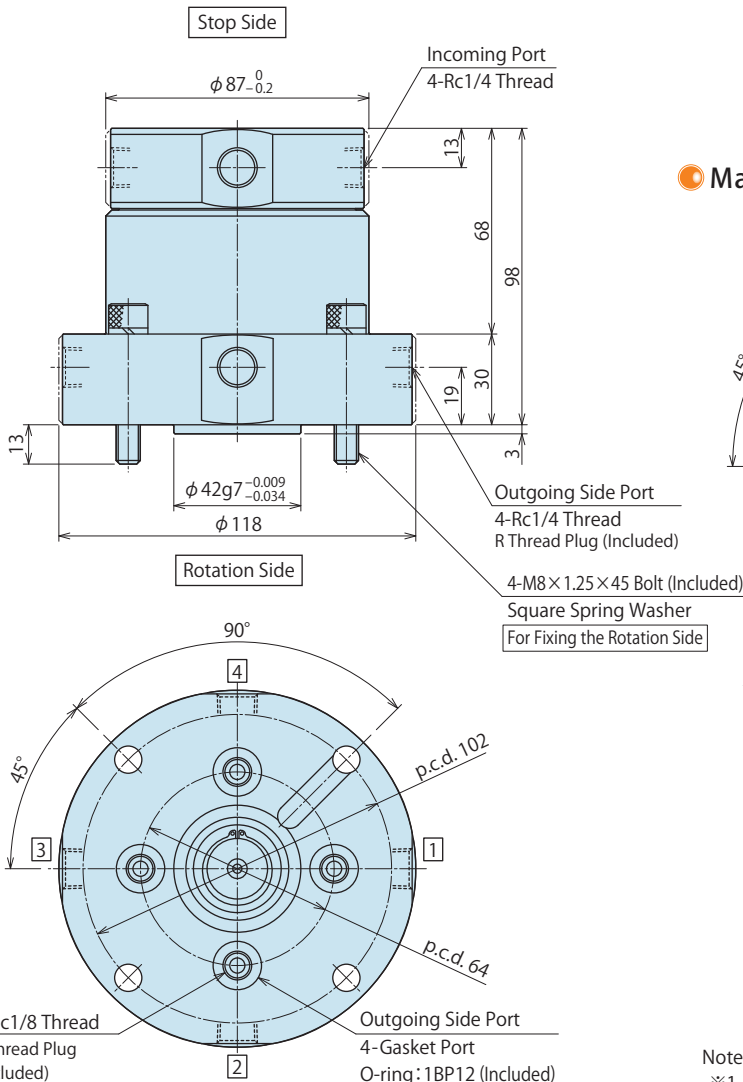

### Machining Dimensions of Mounting Area

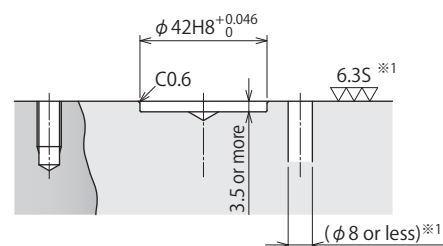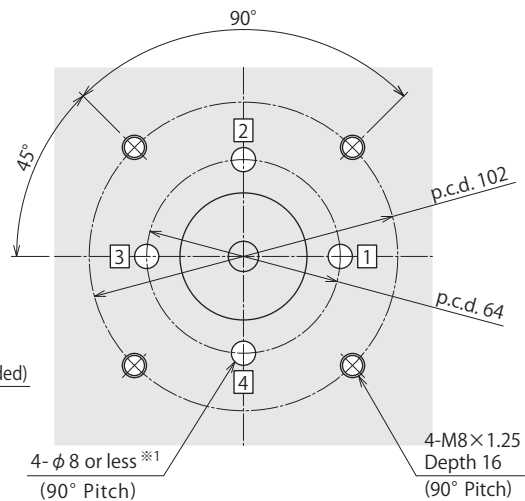

Notes :

※1. In case of the gasket option.

- The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve

BWD

Hydraulic Non-Leak Coupler

BGA/BGB

BGC/BGD

BGP/BGS

BBP/BBS

BNP/BNS

BJP/BSJ

BFP/BFS

Auto Coupler

JTA/JTB

JTC/JTD

JVA/JVB

JVC/JVD

JVE/JVF

JNA/JNB

JNC/JND

JLP/JLS

Rotary Joint

JR

Hydraulic Valve

BK

BEQ

BT

BLS/BLG

BLB

JSS/JS

JKA/JKB

BMA/BMG

AU/AU-M

BU

BP/JPB

BX

BEP/BSP

BH

BC

Air Hydraulic Unit

CV

CK

CP/CPB

CPC/CQC

CB

CC

AB/AB-V

AC/AC-V





External Dimensions : JRC0600


※ This drawing shows JRC0600-S-A.  
(6 Circuit Ports)

Contact us when a G screw is required for the incoming side port or the outgoing side port.



Model No. Indication

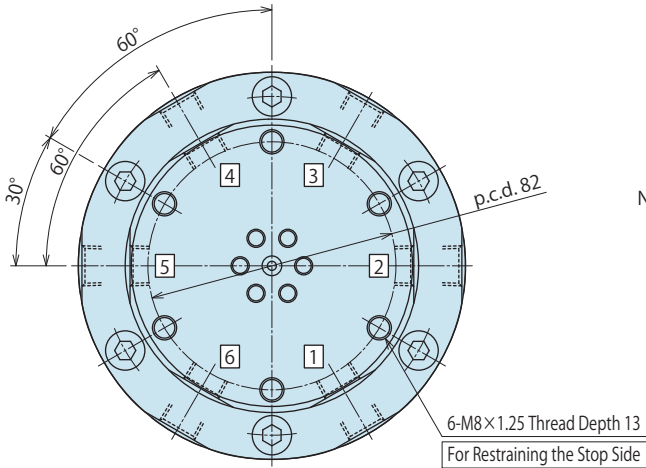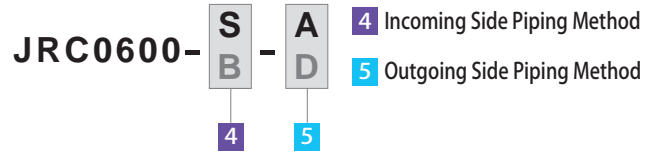

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  5. The port number is marked on each port.
  6. When using Rc1/4 for the outgoing side port, please set the attached R1/8 thread plug.
- When using the gasket option, please set the attached O-ring and R1/4 thread plug.

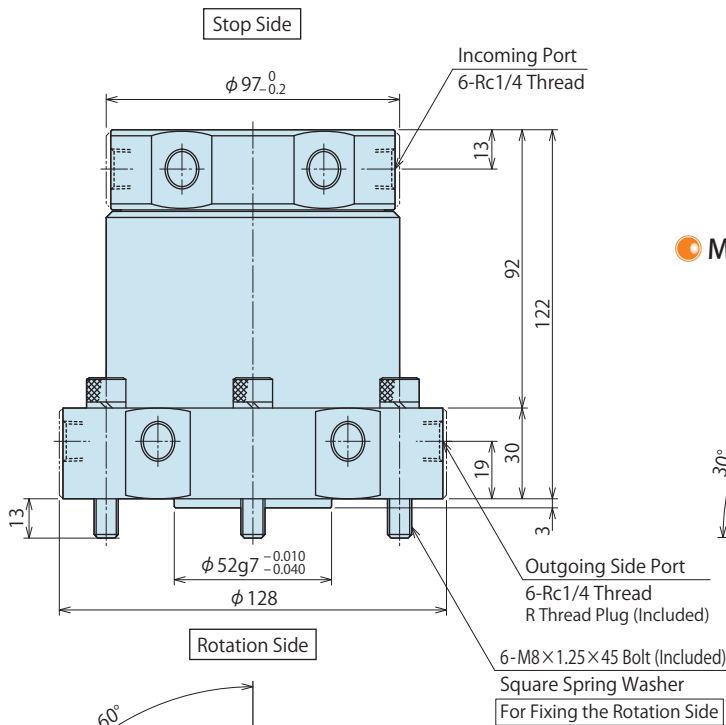

Machining Dimensions of Mounting Area

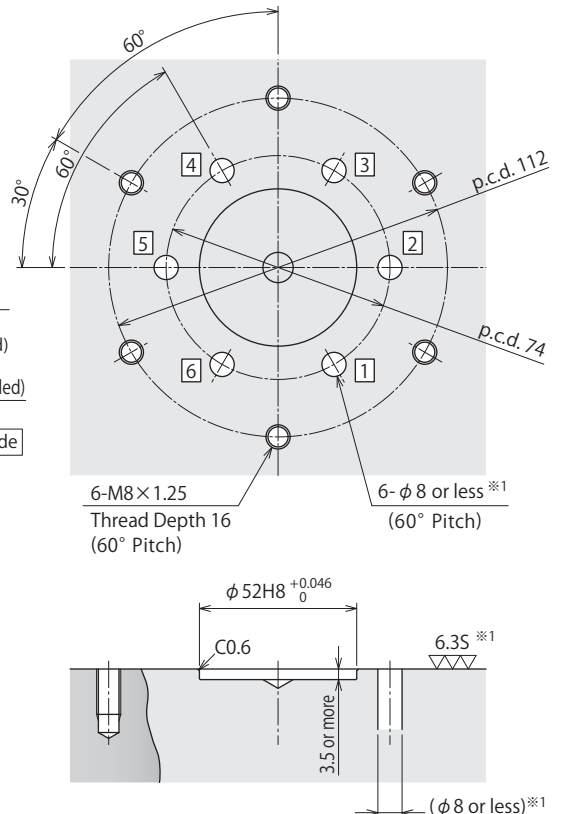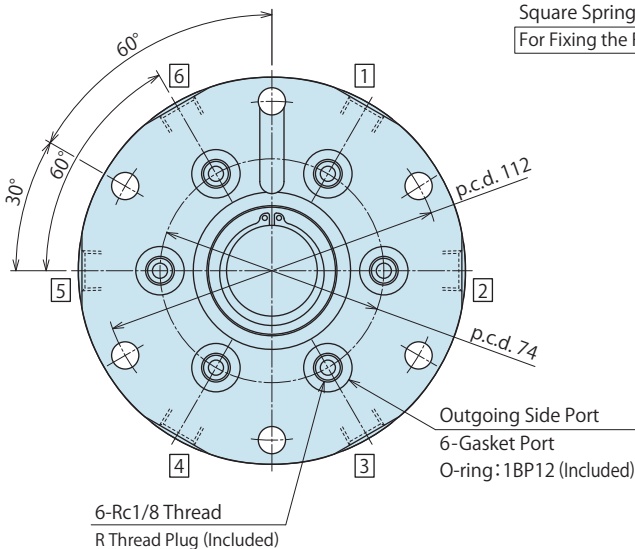



- Notes :
- ※1. In case of the gasket option.
1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

### External Dimensions : JRC0800

※ This drawing shows JRC0800-S-A.  
(8 Circuit Ports)


Contact us when a G screw is required for the incoming side port or the outgoing side port.

Model No. Indication

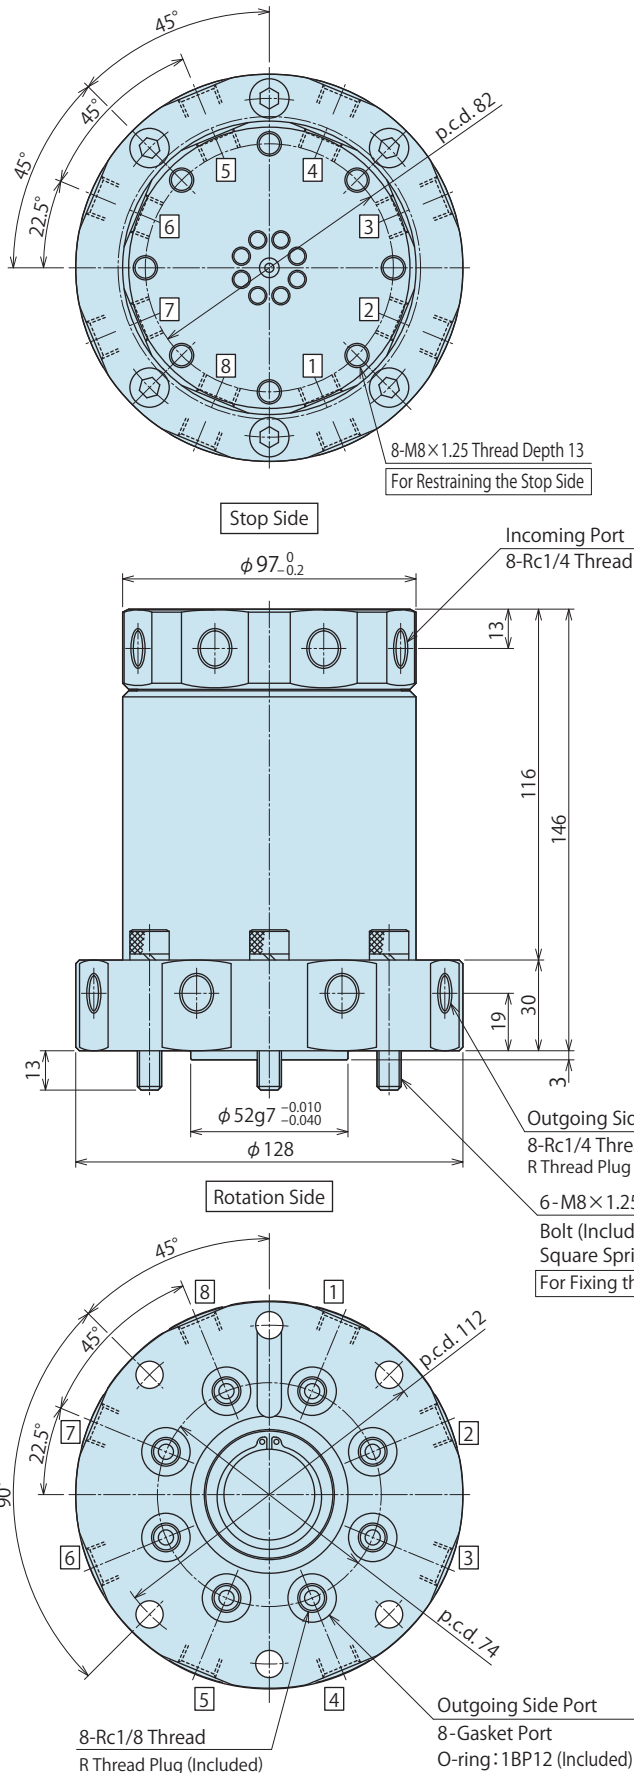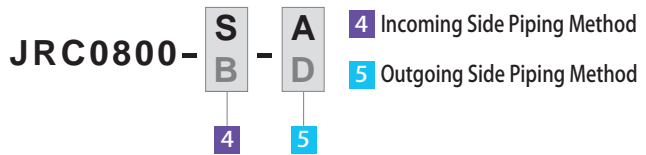

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation since it will cause overheating and damage to the internal packing.
  5. The port number is marked on each port.
  6. When using Rc1/4 for the outgoing side port, please set the attached R1/8 thread plug. When using the gasket option, please set the attached O-ring and R1/4 thread plug.

### Machining Dimensions of Mounting Area

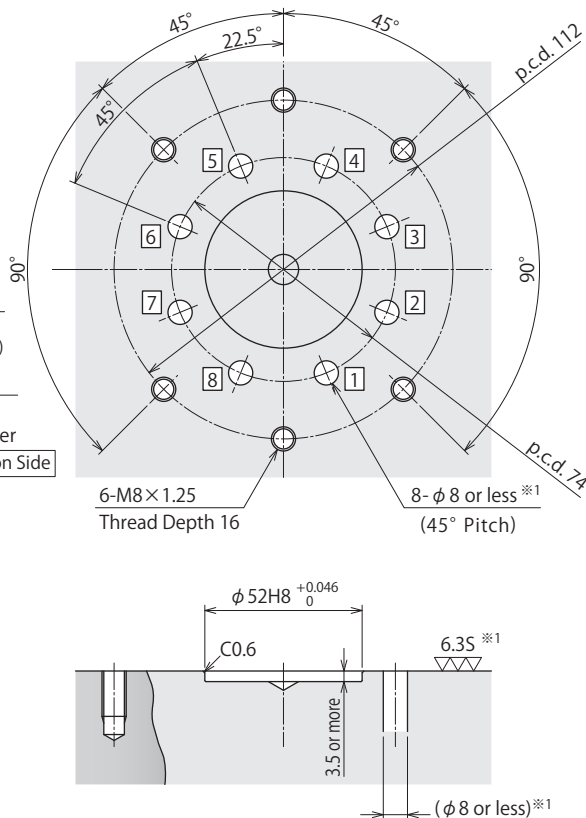

Notes :

※1. In case of the gasket option.

1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.3S or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve

BWD

Hydraulic Non-Leak Coupler

BGA/BGB

BGC/BGD

BGP/BGS

BBP/BBS

BNP/BNS

BJP/BS

BFP/BFS

Auto Coupler

JTA/JTB

JTC/JTD

JVA/JVB

JVC/JVD

JVE/JVF

JNA/JNB

JNC/JND

JLP/JLS

Rotary Joint

JR

Hydraulic Valve

BK

BEQ

BT

BLS/BLG

BLB

JSS/JS

JKA/JKB

BMA/BMG

AU/AU-M

BU

BP/JPB

BX

BEP/BSP

BH

BC

Air Hydraulic Unit

CV

CK

CP/CPB

CPC/CQC

CB

CC

AB/AB-V



AC/AC-V

External Dimensions : JRD1200


※ This drawing shows JRD1200-S-G.  
(12 Circuit Ports)

Contact us when a G screw is required for the incoming side port.




Model No. Indication

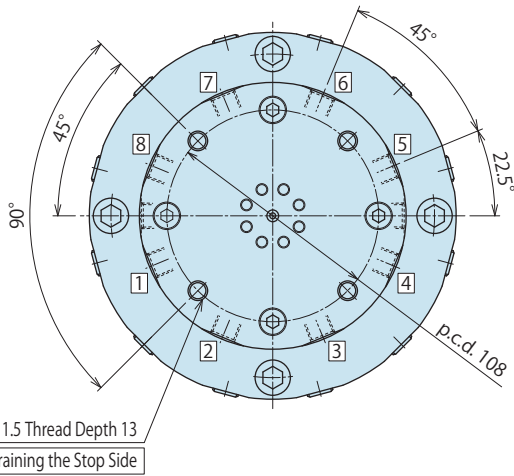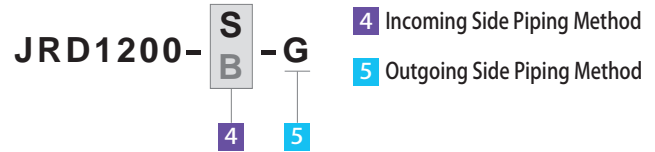

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. When using both oil and air, it is recommended to use 1~8 for oil, and A~D for air. (Due to the dual structure, the rotation sealing diameter of 1~8 is smaller than that of A~D.)
    - Rotating torque can be lowered since sliding resistance caused by hydraulic pressure (high pressure) is decreased.
    - No need to consider oil slick leak from hydraulic circuit to air circuit.
  4. If it is not able to use the above recommended ports and there is oil slick leak to air circuit, install a drain circuit between the two circuits.
  5. Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  6. The port number is marked on each port.

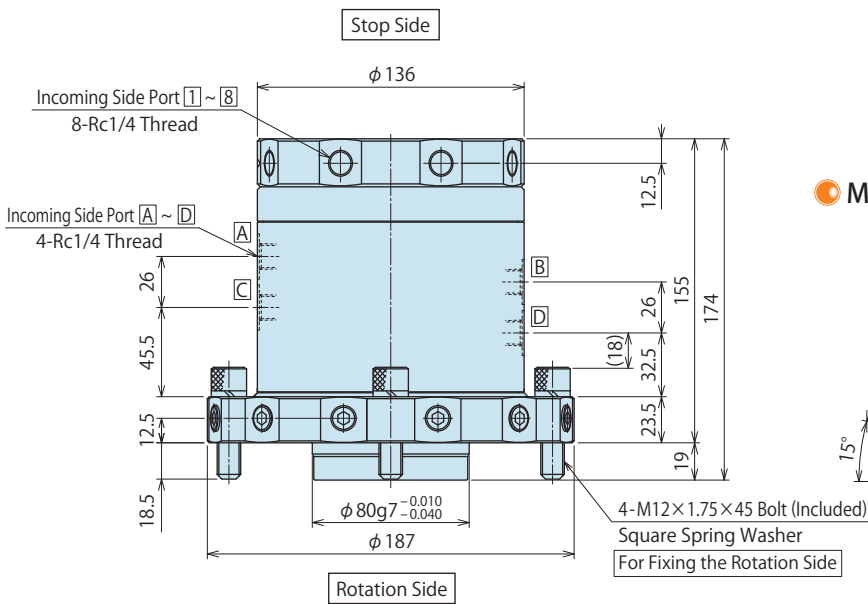

Machining Dimensions of Mounting Area

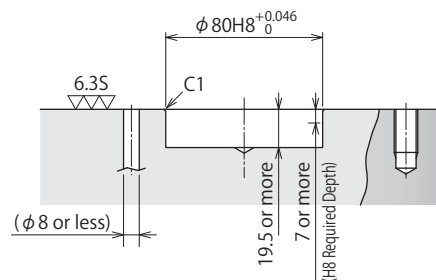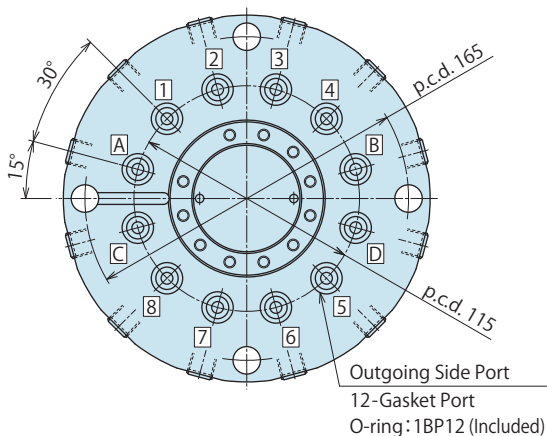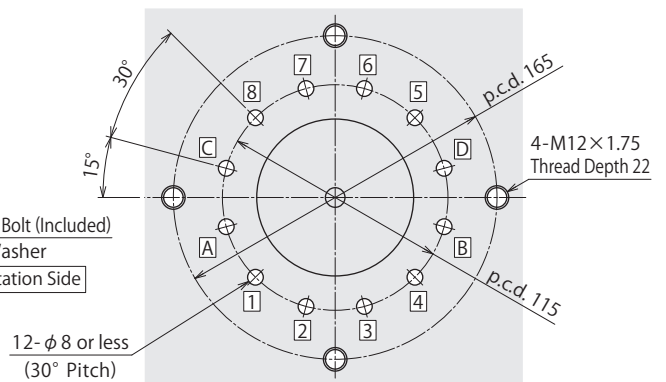



- Note :
1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.3S or less.

### External Dimensions : JRD1600


※ This drawing shows JRD1600-S-G.  
(16 Circuit Ports)

Contact us when a G screw is required for the incoming side port.




Model No. Indication

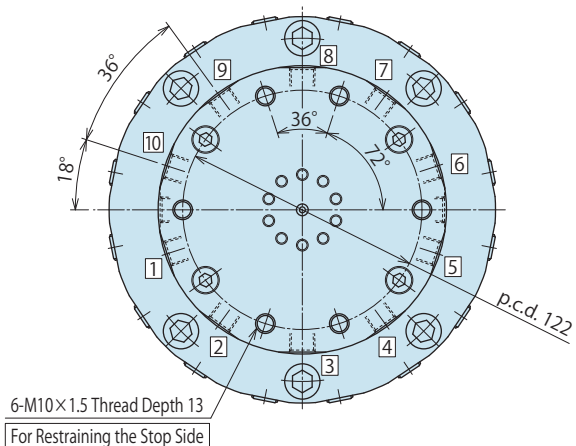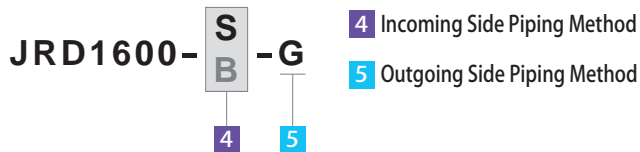

- Notes :
- The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  - Please use a hose for piping of the stop side.
  - When using both oil and air, it is recommended to use 1 ~ 10 for oil, and A ~ F for air. (Due to the dual structure, the rotation seal diameter of 1 ~ 10 is smaller than that of A ~ F.)
    - Rotating torque can be lowered since sliding resistance caused by hydraulic pressure (high pressure) is decreased.
    - No need to consider oil slick leak from hydraulic circuit to air circuit.
  - If it is not able to use the above recommended ports and there is oil slick leak to air circuit, install a drain circuit between the two circuits.
  - Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  - The port number is marked on each port.

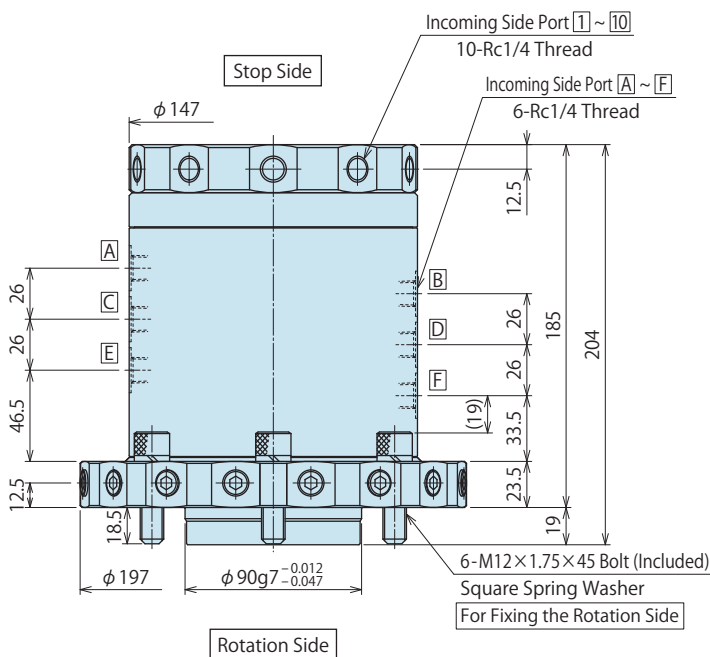

### Machining Dimensions of Mounting Area

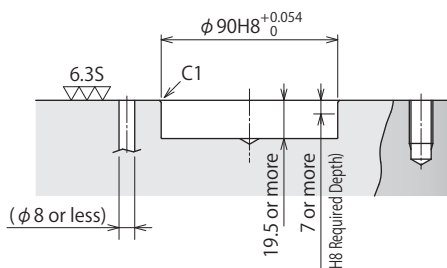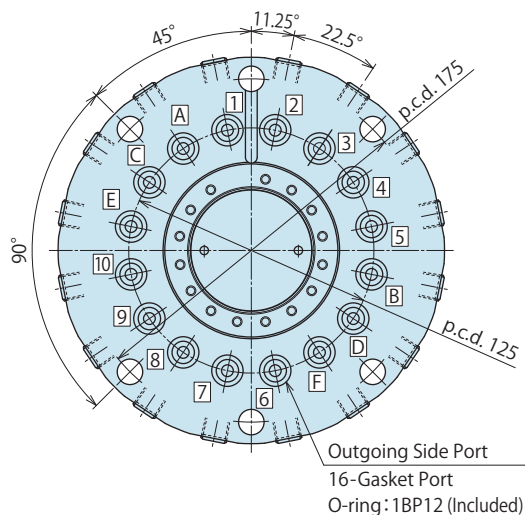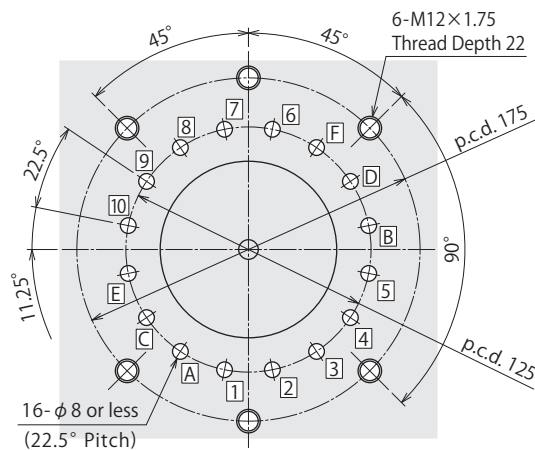

- Note :
- The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve
BWD
Hydraulic Non-Leak Coupler
BGA/BGB
BGC/BGD
BGP/BGS
BBP/BBS
BNP/BNS
BJP/BJS
BFP/BFS

Auto Coupler
JTA/JTB
JTC/JTD
JVA/JVB
JVC/JVD
JVE/JVF
JNA/JNB
JNC/JND
JLP/JLS

Rotary Joint
JR

Hydraulic Valve
BK
BEQ
BT
BLS/BLG
BLB
JSS/JS
JKA/JKB
BMA/BMG
AU/AU-M
BU
BP/JPB
BX
BEP/BSP
BH
BC



Air Hydraulic Unit
CV
CK
CP/CPB
CPC/CQC
CB
CC
AB/AB-V
AC/AC-V

External Dimensions : JRB0210


※This drawing shows JRB0210-S-G-S.  
(2 Circuit Ports + 1 Center Through Port)

Contact us when a G screw is required for the incoming side port or the center through port. (The center through port is only available with a conversion connector.)




Model No. Indication

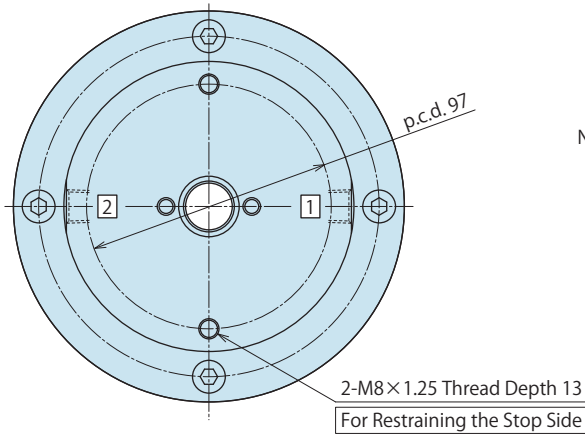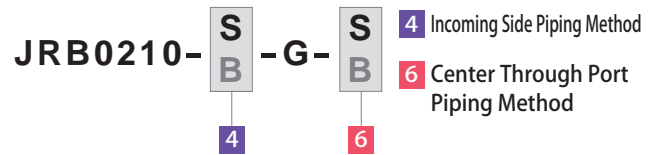

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  5. It requires another rotary joint when using the center coolant port.
  6. The port number is marked on each port.

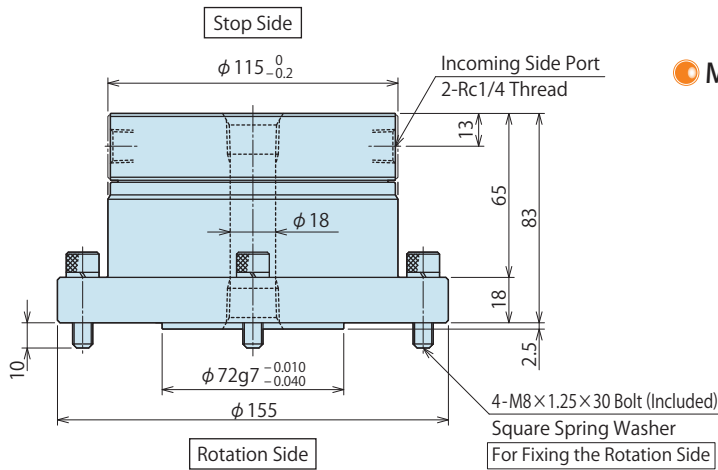

Machining Dimensions of Mounting Area

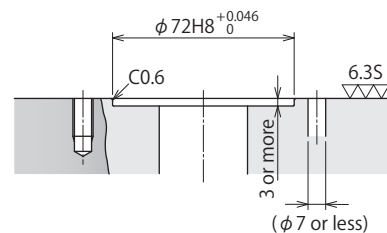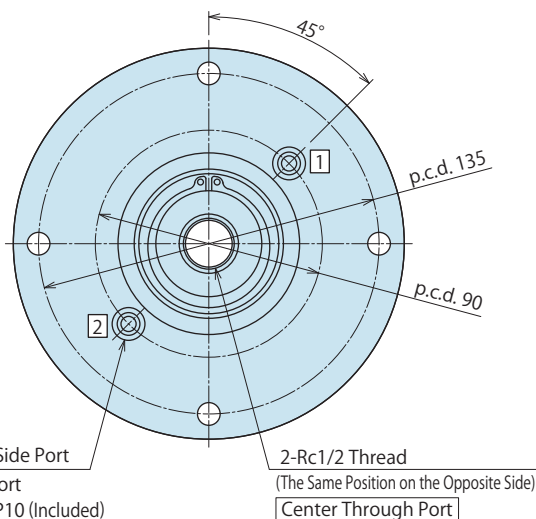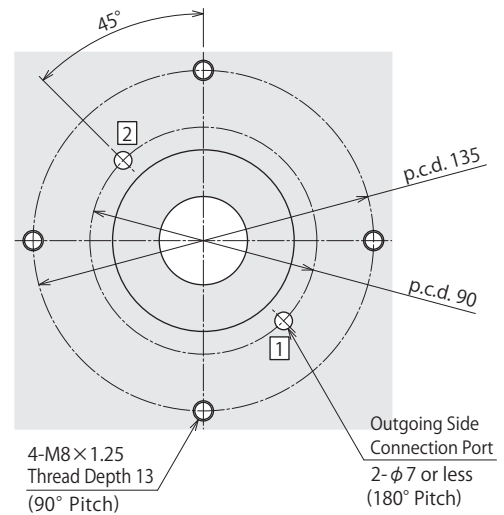

Note :



1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

### External Dimensions : JRB0410


※ This drawing shows JRB0410-S-G-S.  
(4 Circuit Ports + 1 Center Through Port)

Contact us when a G screw is required for the incoming side port or the center through port. (The center through port is only available with a conversion connector.)




Model No. Indication

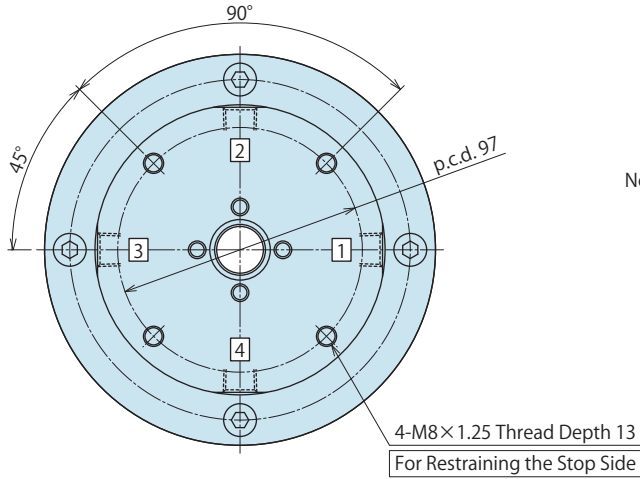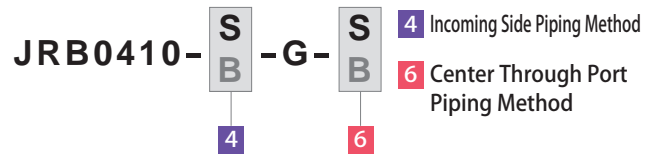

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  5. It requires another rotary joint when using the center coolant port.
  6. The port number is marked on each port.

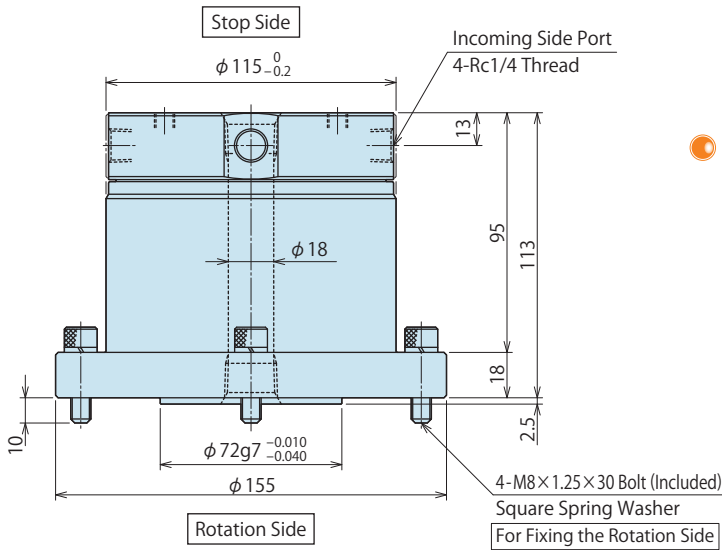

### Machining Dimensions of Mounting Area

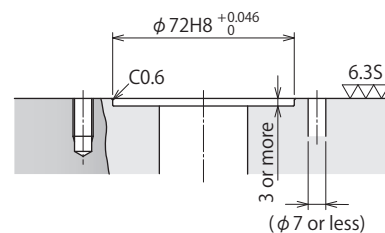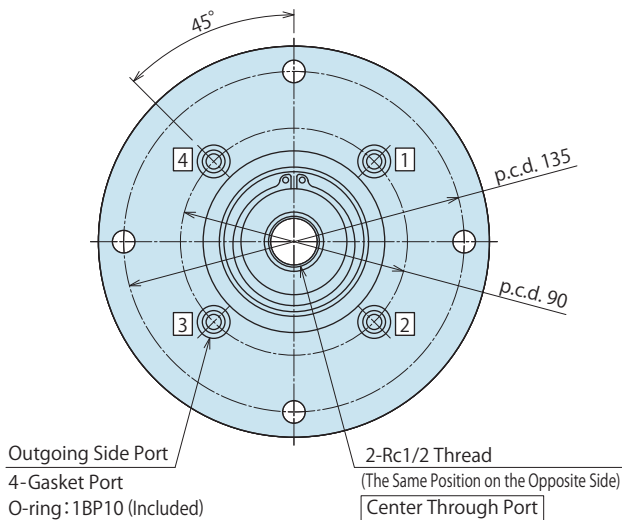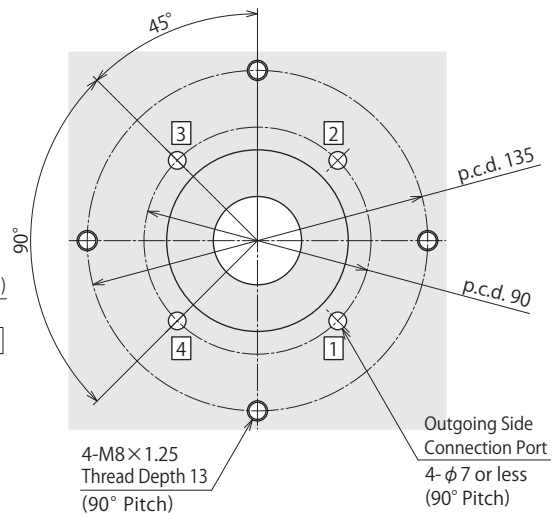

Note :

1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve

BWD

Hydraulic Non-Leak Coupler

BGA/BGB

BGC/BGD

BGP/BGS

BBP/BBS

BNP/BNS

BJP/BS

BFP/BFS

Auto Coupler

JTA/JTB

JTC/JTD

JVA/JVB

JVC/JVD

JVE/JVF

JNA/JNB

JNC/JND

JLP/JLS

Rotary Joint

JR

Hydraulic Valve

BK

BEQ

BT

BLS/BLG

BLB

JSS/JS

JKA/JKB

BMA/BMG

AU/AU-M

BU

BP/JPB

BX

BEP/BSP

BH

BC

Air Hydraulic Unit

CV

CK

CP/CPB

CPC/CQC

CB

CC

AB/AB-V



AC/AC-V

External Dimensions : JRB0610


※This drawing shows JRB0610-S-G-S.  
(6 Circuit Ports + 1 Center Through Port)

Contact us when a G screw is required for the incoming side port or the center through port. (The center through port is only available with a conversion connector.)




Model No. Indication

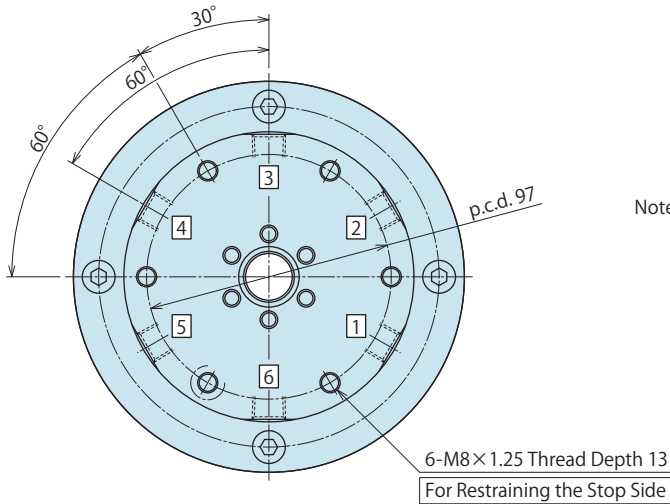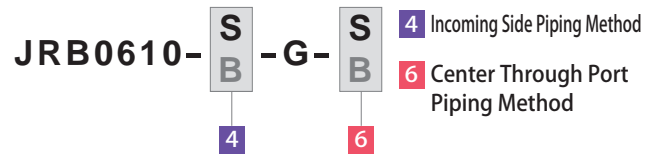

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  5. It requires another rotary joint when using the center coolant port.
  6. The port number is marked on each port.

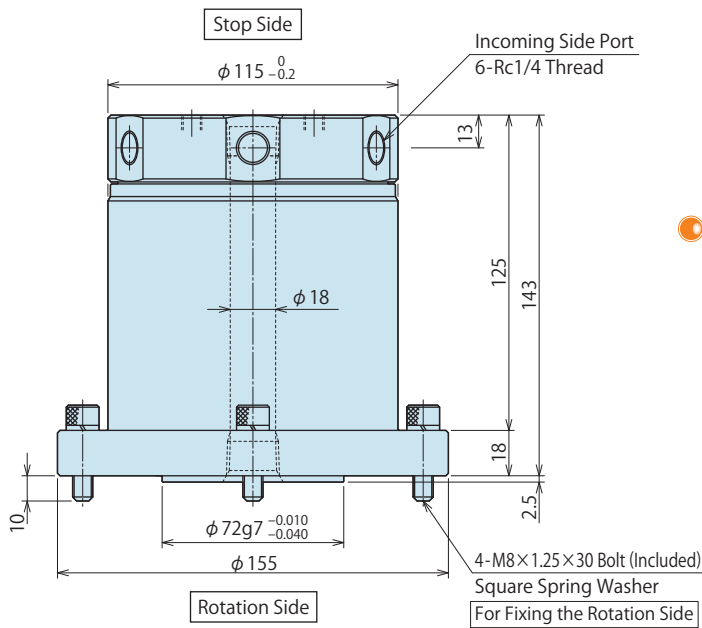

Machining Dimensions of Mounting Area

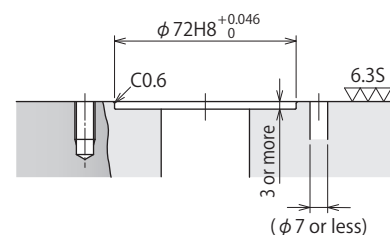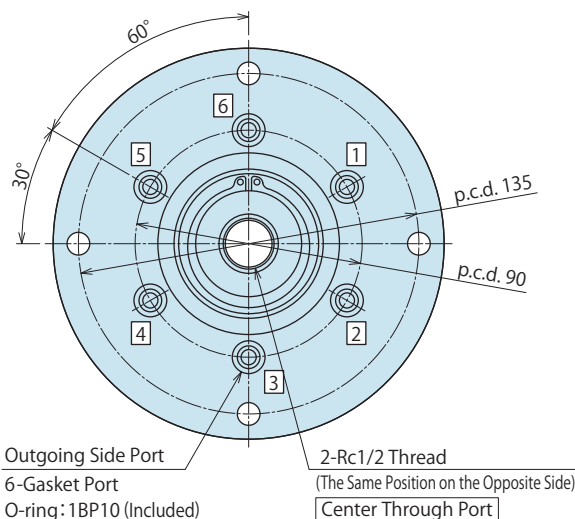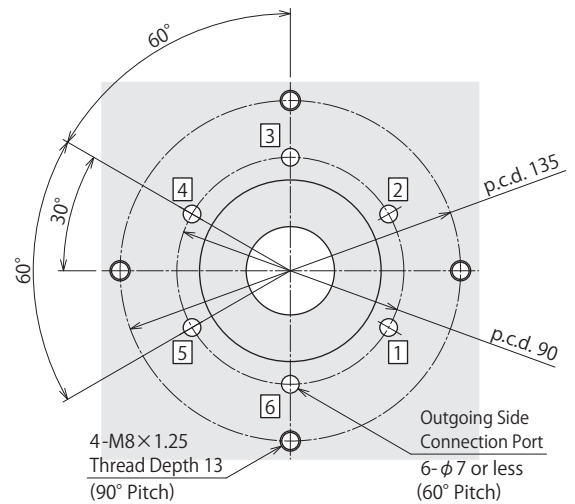

- Note :
1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.


## External Dimensions : JRB0810

※This drawing shows JRB0810-S-G-S.  
(8 Circuit Ports + 1 Center Through Port)


Contact us when a G screw is required for the incoming side port or the center through port. (The center through port is only available with a conversion connector.)

Model No. Indication



**JRB0810-S-G-S**  
S G S  
4 6  
 4 Incoming Side Piping Method  
 6 Center Through Port Piping Method

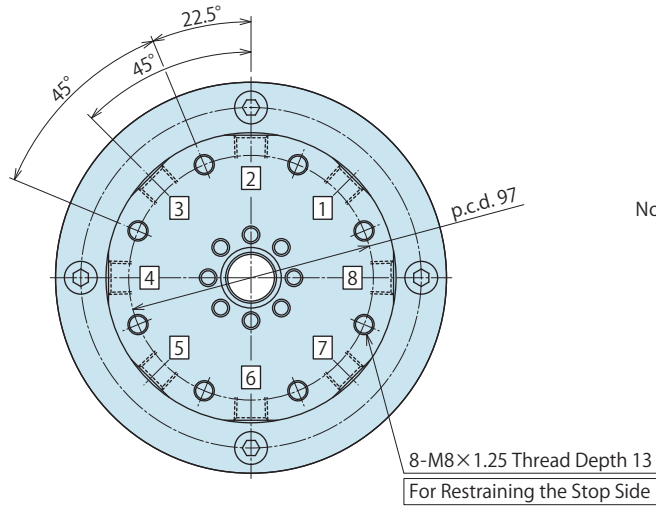

- Notes :
1. The flange part of the rotation side must be fixed with the bolts, and restrain only the rotation direction of the stop side.
  2. Please use a hose for piping of the stop side.
  3. If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits.
  4. Please avoid continuous operation as it will cause overheating and damage to the internal packing.
  5. It requires another rotary joint when using the center coolant port.
  6. The port number is marked on each port.

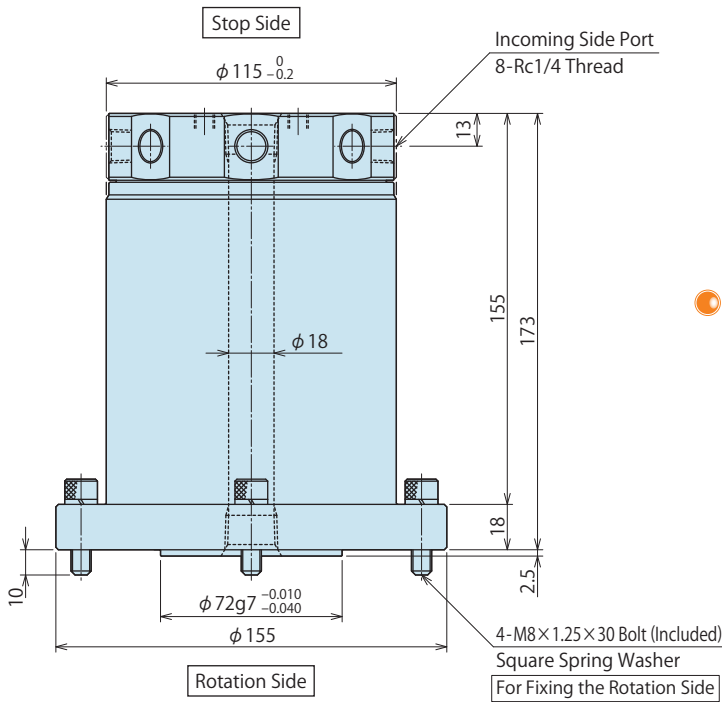

## Machining Dimensions of Mounting Area

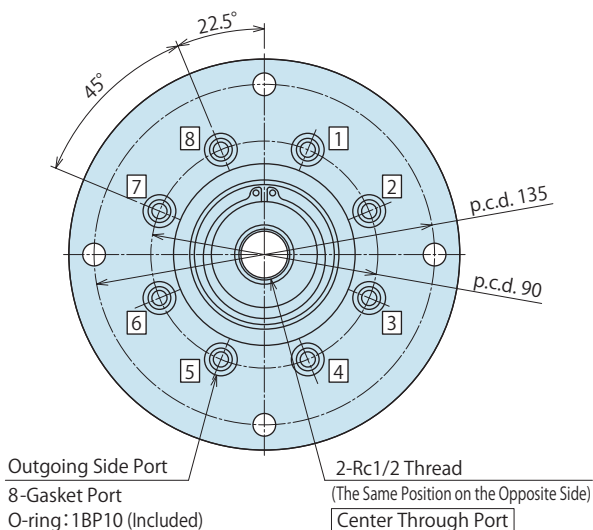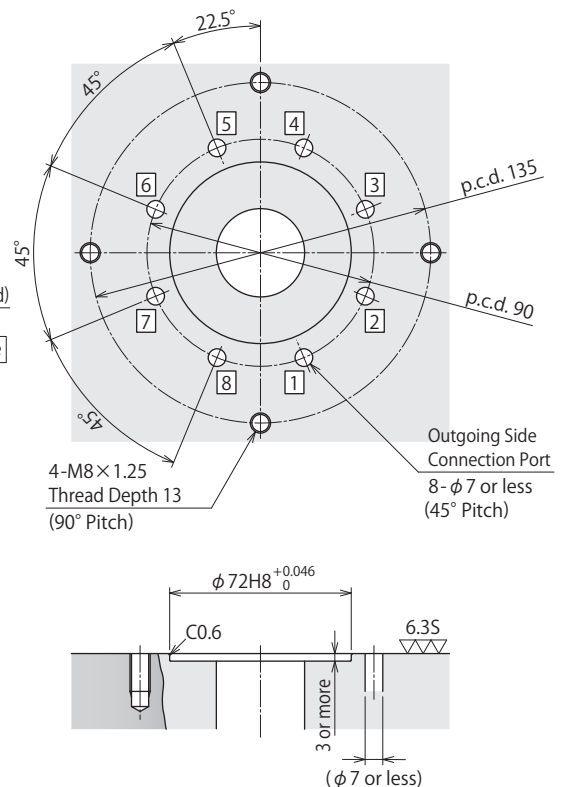

- Note :
1. The mounting surface (O-ring sealing surface) should be flat and its maximum height of the roughness profile should be 6.35 or less.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Air Sequence Valve
BWD
Hydraulic Non-Leak Coupler
BGA/BGB
BGC/BGD
BGP/BGS
BBP/BBS
BNP/BNS
BJP/BS
BFP/BFS

Auto Coupler
JTA/JTB
JTC/JTD
JVA/JVB
JVC/JVD
JVE/JVF
JNA/JNB
JNC/JND
JLP/JLS

Rotary Joint
JR

Hydraulic Valve
BK
BEQ
BT
BLS/BLG
BLB
JSS/JS
JKA/JKB
BMA/BMG
AU/AU-M
BU
BP/JPB
BX
BEP/BSP
BH
BC

Air Hydraulic Unit
CV
CK
CP/CPB
CPC/CQC
CB
CC
AB/AB-V
AC/AC-V



**Cautions**

**Notes for Design**

- 1) Check Specifications
  - Please use each product according to the specifications.
- 2) Hold only the rotating direction of the stop side.
  - For the stop side, hold only the rotating direction to avoid offset load. For the rotation side, fix it with the attached bolts.
- 3) Use a hose for piping of the stop side.
  - Steel piping increases a load during rotation and leads to malfunction.
- 4) Please avoid continuous operation.
  - It will cause overheating of the internal packing.  
(Do not exceed the temperature written in the specification even with lower rotation speed.)
- 5) Be careful with oil slick leak when air circuit and hydraulic circuit are set close to each other.
  - If there is oil slick leak from hydraulic circuit to air circuit, install a drain circuit between the two circuits. At this time, make sure not to block the drain circuit port with a plug, etc.  
(Depending on the model, there will be no oil slick leak to a specific circuit.)
- 6) Rotating torque varies depending on the condition of fluid pressurization.
  - The rotating torque shown in the performance curve is for reference.
- 7) The starting torque can be more than double of the rotating torque.
  - It varies depending on the down time.
- 8) For JRA Series
 

Select either the piping option or the gasket option for the shaft side port.

  - When using Rc1/4 (G1/4) piping option for the shaft side port, please set the attached R1/8 thread plug. When using the gasket option, please set the attached O-ring and R1/4 (G1/4A) thread plug.
- 9) For JRB Series
 

The center through port is not designed as a rotary structure.

  - When using the center through port, install a swivel joint, etc.
- 10) For JRC Series
 

Select either the piping option or the gasket option for the outgoing side port.

  - When using Rc1/4 (G1/4) piping option for the shaft side port, please set the attached R1/8 thread plug. When using the gasket option, please set the attached O-ring and R1/4 (G1/4A) thread plug.

**Installation Notes**

- 1) Check the Usable Fluid
  - Please refer to the Hydraulic Fluid List and use the appropriate hydraulic oil (Refer to P.1355).
  - Please supply filtered clean dry air.
- 2) Procedure before Piping
  - The pipeline, piping connector and fixture circuits should be cleaned by thorough flushing. Otherwise, the flow characteristics may decrease due to clogging, or the packing can be damaged.
  - Dust and cutting chips in the circuit can lead to fluid leakage and malfunction.
  - This product is not equipped with a protective function to prevent contaminants going into a hydraulic system and pipes.
  - In order to prevent contaminants from going into the product during the piping work, it should be carefully cleaned before working.
- 3) Applying Sealing Tape
  - Wrap with tape 1 to 2 times following the screw direction.
  - Pieces of the sealing tape can lead to fluid leakage and malfunction.
  - In order to prevent contaminants from going into the product during the piping work, it should be carefully cleaned before working.
- 4) Installation of the Product
  - Make sure not to damage the O-ring when installing the product.
  - **JRB/JRC/JRD** : Use all the attached bolts with hex holes (Strength Grade 12.9) and tighten the body with torque in the following table.  
**JRA** : For installation of the shaft or the housing, use the hexagonal socket bolts as multiple mounting bolt holes (Strength Grade 12.9) and tighten them with torque in the following table.

Model No.	Mounting Bolt Size	Tightening Torque (N·m)
<b>JRA</b>	M8×1.25	25
<b>JRB</b>	M8×1.25	25
<b>JRC</b>	M8×1.25	25
<b>JRD</b>	M12×1.5	80

- 5) Oil Leakage when Installing and Starting to Use the Product
  - Durability testing of each port is performed with hydraulic pressure 1.5 times the maximum operating pressure.  
The oil is released after the test, but there can be slight oil leakage when installing and starting to use the product.

**Hydraulic Fluid List**

Maker	ISO Viscosity Grade ISO-VG-32	
	Anti-Wear Hydraulic Oil	Multi-Purpose Hydraulic Oil
Showa Shell Sekiyu	Tellus S2 M 32	Morlina S2 B 32
Idemitsu Kosan	Daphne Hydraulic Fluid 32	Daphne Super Multi Oil 32
JX Nippon Oil & Energy	Super Hyrando 32	Super Mulpus DX 32
Cosmo Oil	Cosmo Hydro AW32	Cosmo New Mighty Super 32
ExxonMobil	Mobil DTE 24	Mobil DTE 24 Light
Matsumura Oil	Hydol AW-32	
Castrol	Hyspin AWS 32	

Note : As it may be difficult to purchase the products as shown in the table from overseas, please contact the respective manufacturer.

※ Please refer to P.1355 for common cautions.

- Installation Notes
- Hydraulic Fluid List
- Notes on Hydraulic Cylinder Speed Control Circuit
- Notes on Handling
- Maintenance/Inspection
- Warranty

**High-Power  
Series**
**Pneumatic Series**
**Hydraulic Series**
**Valve / Coupler  
Hydraulic Unit**
**Manual Operation  
Accessories**
**Cautions / Others**
**Air  
Sequence Valve**

BWD

**Hydraulic  
Non-Leak Coupler**

BGA/BGB

BGC/BGD

BGP/BGS

BBP/BBS

BNP/BNS

BJP/BJS

BFP/BFS

**Auto Coupler**

JTA/JTB

JTC/JTD

JVA/JVB

JVC/JVD

JVE/JVF

JNA/JNB

JNC/JND

JLP/JLS

**Rotary Joint**
**JR**
**Hydraulic Valve**

BK

BEQ

BT

BLS/BLG

BLB

JSS/JS

JKA/JKB

BMA/BMG

AU/AU-M

BU

BP/JPB

BX

BEP/BSP

BH

BC

**Air  
Hydraulic Unit**

CV

CK

CP/CPB

CPC/CQC

CB

CC


AB/AB-V

AC/AC-V


## ● Cautions

### ● Installation Notes (For Hydraulic Series)

- 1) Check the Usable Fluid
  - Please use the appropriate fluid by referring to the Hydraulic Fluid List.
- 2) Procedure before Piping
  - The pipeline, piping connector and fixture circuits should be cleaned by thorough flushing.
  - The dust and cutting chips in the circuit may lead to fluid leakage and malfunction.
  - There is no filter provided with Kosmek's product except for a part of valves which prevents foreign materials and contaminants from getting into the circuit.
- 3) Applying Sealing Tape
  - Wrap with tape 1 to 2 times following the screw direction.
  - Pieces of the sealing tape can lead to oil leakage and malfunction.
  - Please implement piping construction in a clear environment to prevent anything getting in products.
- 4) Air Bleeding of the Hydraulic Circuit
  - If the hydraulic circuit has excessive air, the action time may become very long. If air enters the circuit after connecting the hydraulic port or under the condition of no air in the oil tank, please perform the following steps.
    - ① Reduce hydraulic pressure to less than 2MPa.
    - ② Loosen the cap nut of pipe fitting closest to the clamp by one full turn.
    - ③ Shake the pipeline to loosen the outlet of pipe fitting.  
Hydraulic fluid mixed with air comes out.

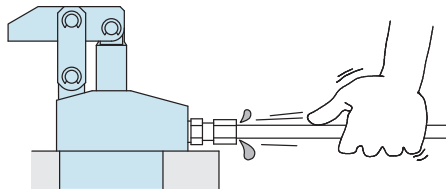

- ④ Tighten the cap nut after bleeding.
- ⑤ It is more effective to release air at the highest point inside the circuit or at the end of the circuit.  
(Set an air bleeding valve at the highest point inside the circuit.)

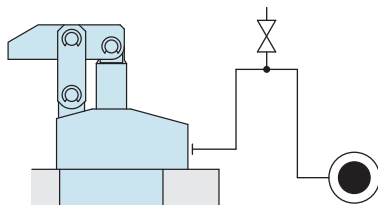

### 5) Checking Looseness and Retightening

- At the beginning of the machine installation, the bolt and nut may be tightened lightly. Check the looseness and re-tighten as required.

### ● Hydraulic Fluid List

Maker	ISO Viscosity Grade ISO-VG-32	
	Anti-Wear Hydraulic Oil	Multi-Purpose Hydraulic Oil
Showa Shell Sekiyu	Tellus S2 M 32	Morlina S2 B 32
Idemitsu Kosan	Daphne Hydraulic Fluid 32	Daphne Super Multi Oil 32
JX Nippon Oil & Energy	Super Hyrando 32	Super Mulpus DX 32
Cosmo Oil	Cosmo Hydro AW32	Cosmo New Mighty Super 32
ExxonMobil	Mobil DTE 24	Mobil DTE 24 Light
Matsumura Oil	Hydol AW-32	
Castrol	Hyspin AWS 32	

Note : Please contact manufacturers when customers require products in the list above.


● Notes on Hydraulic Cylinder Speed Control Unit




Please pay attention to the cautions below. Design the hydraulic circuit for controlling the action speed of hydraulic cylinder. Improper circuit design may lead to malfunctions and damages. Please review the circuit design in advance.

● Flow Control Circuit for Single Acting Cylinder

For spring return single acting cylinders, restricting flow during release can extremely slow down or disrupt release action. The preferred method is to control the flow during the lock action using a valve that has free-flow in the release direction. It is also preferred to provide a flow control valve at each actuator.

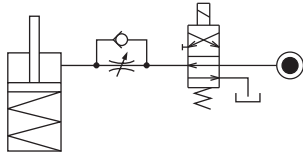

Accelerated clamping speed by excessive hydraulic flow to the cylinder may sustain damage. In this case add flow control to regulate flow. (Please add flow control to release flow if the lever weight is put on at the time of release action when using swing clamps.)

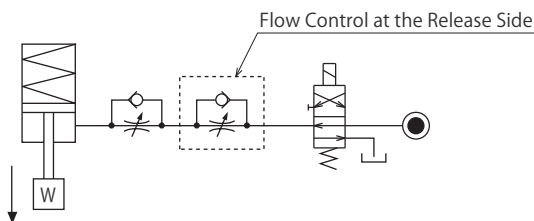

● Flow Control Circuit for Double Acting Cylinder


Flow control circuit for double acting cylinder should have meter-out circuits for both the lock and release sides. Meter-in control can have adverse effect by presence of air in the system.

However, in the case of controlling LKE, TMA, TLA, both lock side and release side should be meter-in circuit.


Refer to P.75 for speed adjustment of LKE.

For TMA and TLA, if meter-out circuit is used, abnormal high pressure is created, which causes oil leakage and damage.

【Meter-out Circuit】 (Except LKE/TMA/TLA)

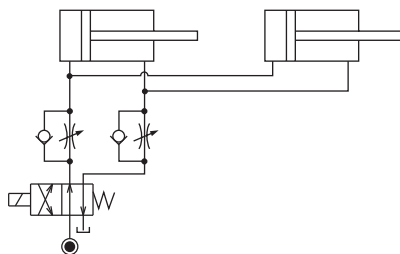


【Meter-in Circuit】 (LKE/TMA/TLA must be controlled with meter-in.)

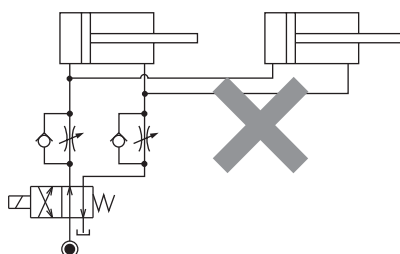


In the case of meter-out circuit, the hydraulic circuit should be designed with the following points.

- ① Single acting components should not be used in the same flow control circuit as the double acting components. The release action of the single acting cylinders may become erratic or very slow.

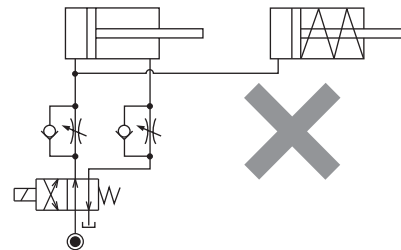


Refer to the following circuit when both the single acting cylinder and double acting cylinder are used together.


- Separate the control circuit.

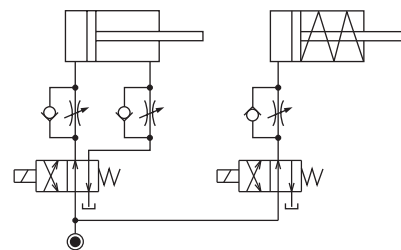

- Reduce the influence of double acting cylinder control unit. However, due to the back pressure in tank line, single action cylinder is activated after double action cylinder works.

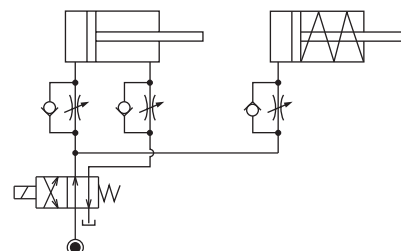

- ② In the case of meter-out circuit, the inner circuit pressure may increase during the cylinder action because of the fluid supply. The increase of the inner circuit pressure can be prevented by reducing the supplied fluid beforehand via the flow control valve. Especially when using sequence valve or pressure switches for clamping detection. If the back pressure is more than the set pressure then the system will not work as it is designed to.

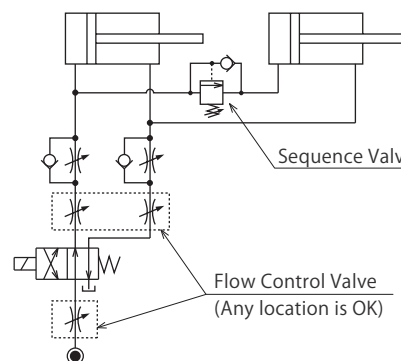

- High-Power Series
- Pneumatic Series
- Hydraulic Series
- Valve / Coupler Hydraulic Unit
- Manual Operation Accessories
- Cautions / Others

Cautions

- Installation Notes (For Hydraulic Series)
- Hydraulic Fluid List
- Notes on Hydraulic Cylinder Speed Control Circuit
- Notes on Handling
- Maintenance/Inspection
- Warranty

Company Profile

- Company Profile
- Our Products
- History

Index


- Search by
- Alphabetical Order

Sales Offices

## ⓘ Cautions

### ● Notes on Handling


- 1) It should be operated by qualified personnel.
  - The hydraulic machine and air compressor should be operated and maintained by qualified personnel.
- 2) Do not operate or remove the product unless the safety protocols are ensured.
  - ① The machine and equipment can only be inspected or prepared when it is confirmed that the safety devices are in place.
  - ② Before the product is removed, make sure that the above-mentioned safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
  - ③ After stopping the product, do not remove until the temperature drops.
  - ④ Make sure there is no abnormality in the bolts and respective parts before restarting the machine or equipment.
- 3) Do not touch a clamp (cylinder) while it is working. Otherwise, your hands may be injured due to clinching.

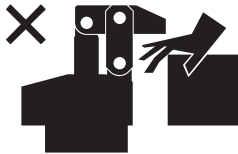


- 4) Do not disassemble or modify.
  - If the equipment is taken apart or modified, the warranty will be voided even within the warranty period.

### ● Maintenance and Inspection

- 1) Removal of the Machine and Shut-off of Pressure Source
  - Before the machine is removed, make sure that safety devices and preventive devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
  - Make sure there is no abnormality in the bolts and respective parts before restarting.
- 2) Regularly clean the area around the piston rod and plunger.
  - If it is used when the surface is contaminated with dirt, it may lead to packing seal damage, malfunctioning and fluid leakage.

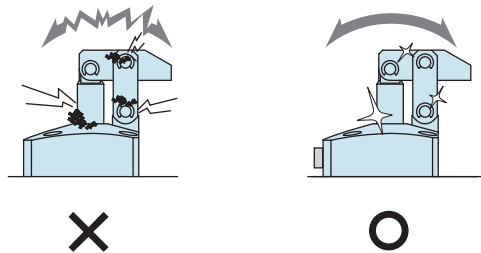

- 3) Please clean out the reference surfaces on a regular basis (taper reference surface and seating surface) of the locating products. (VS/VT/VFL/VFM/VFJ/VFK/WVS/VWM/VWK/VX/VXE/VXF)
  - The locating products, except VX/VXE/VXF model, can remove contaminants with cleaning functions. However, hardened cutting chips, adhesive coolant and others may not be removed. Make sure there are no contaminants before installing a workpiece/pallet.
  - Continuous use with contaminant on components will lead to locating accuracy failure, malfunction and fluid leakage.

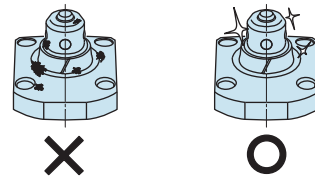

- 4) If disconnecting by couplers, air bleeding should be carried out on a regular basis to avoid air mixed in the circuit.
- 5) Regularly tighten nut, bolt, pin, cylinder, pipe line and others to ensure proper use.
- 6) Make sure the hydraulic fluid has not deteriorated.
- 7) Make sure there is a smooth action without an irregular noise.
  - Especially when it is restarted after left unused for a long period, make sure it can be operated correctly.
- 8) The products should be stored in the cool and dark place without direct sunshine or moisture.
- 9) Please contact us for overhaul and repair.

## ● Warranty

### 1) Warranty Period

- The product warranty period is 18 months from shipment from our factory or 12 months from initial use, whichever is earlier.

### 2) Warranty Scope

- If the product is damaged or malfunctions during the warranty period due to faulty design, materials or workmanship, we will replace or repair the defective part at our expense. Defects or failures caused by the following are not covered.

- ① If the stipulated maintenance and inspection are not carried out.
- ② If the product is used while it is not suitable for use based on the operator's judgment, resulting in defect.
- ③ If it is used or operated in an inappropriate way by the operator. (Including damage caused by the misconduct of the third party.)
- ④ If the defect is caused by reasons other than our responsibility.
- ⑤ If repair or modifications are carried out by anyone other than Kosmek, or without our approval and confirmation, it will void warranty.
- ⑥ Other caused by natural disasters or calamities not attributable to our company.
- ⑦ Parts or replacement expenses due to parts consumption and deterioration. (Such as rubber, plastic, seal material and some electric components.)

Damages excluding from direct result of a product defect shall be excluded from the warranty.

High-Power  
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler  
Hydraulic Unit

Manual Operation  
Accessories

Cautions / Others

#### Cautions

Installation Notes  
(For Hydraulic Series)

Hydraulic Fluid List

Notes on Hydraulic Cylinder  
Speed Control Circuit

Notes on Handling

Maintenance/  
Inspection

Warranty

Company Profile

Company Profile

Our Products

History

Index

Search by  
Alphabetical Order

Sales Offices



WAHLTEC GmbH  
 T: +49 (7584) 9238883  
 F: +49 (7584) 9238887  
 kosmek@wahltec.de  
 www.wahltec.de

# Sales Offices


## Sales Offices across the World

JAPAN HEAD OFFICE Overseas Sales	<b>TEL. +81-78-991-5162</b>	<b>FAX. +81-78-991-8787</b>
	KOSMEK LTD. 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, Japan 651-2241 〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	
United States of America SUBSIDIARY KOSMEK (USA) LTD.	<b>TEL. +1-630-620-7650</b>	<b>FAX. +1-630-620-9015</b>
	650 Springer Drive, Lombard, IL 60148 USA	
MEXICO REPRESENTATIVE OFFICE KOSMEK USA Mexico Office	<b>TEL. +52-442-161-2347</b>	
	Av. Santa Fe #103 int 59 Col. Santa Fe Juriquilla C.P. 76230 Queretaro, Qro Mexico	
EUROPE SUBSIDIARY KOSMEK EUROPE GmbH	<b>TEL. +43-463-287587</b>	<b>FAX. +43-463-287587-20</b>
	Schleppeplatz 2 9020 Klagenfurt am Wörthersee Austria	
CHINA KOSMEK (CHINA) LTD. 考世美(上海)貿易有限公司	<b>TEL. +86-21-54253000</b>	<b>FAX. +86-21-54253709</b>
	Room601, RIVERSIDE PYRAMID No.55, Lane21, Pusan Rd, Pudong Shanghai 200125, China 中国上海市浦东新区浦三路21弄55号银亿滨江中心601室 200125	
INDIA BRANCH OFFICE KOSMEK LTD - INDIA	<b>TEL. +91-9880561695</b>	
	F 203, Level-2, First Floor, Prestige Center Point, Cunningham Road, Bangalore -560052 India	
THAILAND REPRESENTATIVE OFFICE KOSMEK Thailand Representation Office	<b>TEL. +66-2-300-5132</b>	<b>FAX. +66-2-300-5133</b>
	67 Soi 58, RAMA 9 Rd., Suanluang, Suanluang, Bangkok 10250, Thailand	
TAIWAN (Taiwan Exclusive Distributor) Full Life Trading Co., Ltd. 盈生貿易有限公司	<b>TEL. +886-2-82261860</b>	<b>FAX. +886-2-82261890</b>
	16F-4, No.2, Jian Ba Rd., Zhonghe District, New Taipei City Taiwan 23511 台湾新北市中和區建八路2號 16F-4 (遠東世紀廣場)	
PHILIPPINES (Philippines Exclusive Distributor) G.E.T. Inc, Phil.	<b>TEL. +63-2-310-7286</b>	<b>FAX. +63-2-310-7286</b>
	Victoria Wave Special Economic Zone Mt. Apo Building, Brgy. 186, North Caloocan City, Metro Manila, Philippines 1427	
INDONESIA (Indonesia Exclusive Distributor) PT. Yamata Machinery	<b>TEL. +62-21-29628607</b>	<b>FAX. +62-21-29628608</b>
	Delta Commercial Park I, Jl. Kenari Raya B-08, Desa Jayamukti, Kec. Cikarang Pusat Kab. Bekasi 17530 Indonesia	

## Sales Offices in Japan

Head Office Osaka Sales Office Overseas Sales	<b>TEL. 078-991-5162</b>	<b>FAX. 078-991-8787</b>
	〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	
Tokyo Sales Office	<b>TEL. 048-652-8839</b>	<b>FAX. 048-652-8828</b>
	〒331-0815 埼玉県さいたま市北区大成町4丁目81番地	
Nagoya Sales Office	<b>TEL. 0566-74-8778</b>	<b>FAX. 0566-74-8808</b>
	〒446-0076 愛知県安城市美園町2丁目10番地1	
Fukuoka Sales Office	<b>TEL. 092-433-0424</b>	<b>FAX. 092-433-0426</b>
	〒812-0006 福岡県福岡市博多区上牟田1丁目8-10-101	

# Global Network

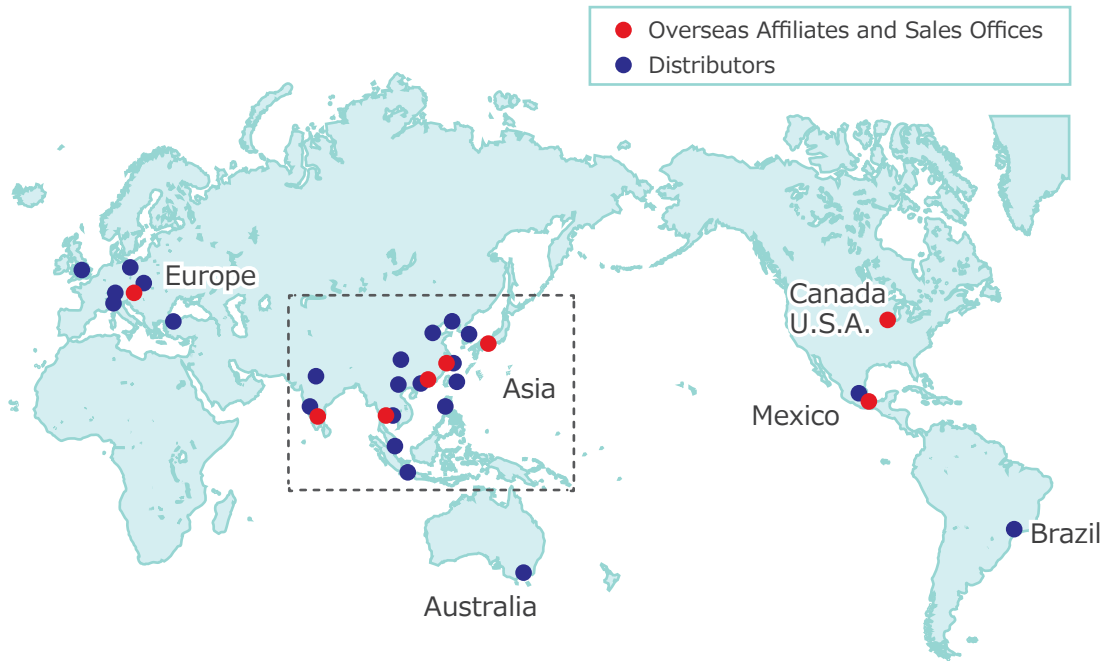

Asia Detailed Map



WAHLTEC GmbH  
 T: +49 (7584) 9238883  
 F: +49 (7584) 9238887  
 kosmek@wahltec.de  
 www.wahltec.de



● FOR FURTHER INFORMATION ON UNLISTED SPECIFICATIONS AND SIZES, PLEASE CALL US.  
 ● SPECIFICATIONS IN THIS CATALOG ARE SUBJECT TO CHANGE WITHOUT NOTICE.

